

# OPERATION MANUAL

**MODEL NO: DJR1-UP**

2 P.C.BOARDS TYPE



**Nintendo™**

**WARNING**  
=====

This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions manual, may cause interference to radio communications. As temporarily permitted by regulation it has not been tested for compliance with the limits for Class A computing devices pursuant to Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference. Operation of this equipment in a residential area is likely to cause interference in which case the user at his own expense will be required to take whatever measures may be required to correct the interference.

## C O N T E N T S

=====

1. CAUTIONS .....	1
2. SPECIFICATIONS .....	2
3. INSTALLATION OF THE MACHINE	
(1) Cautions on installation .....	3
(2) Earthing of machine .....	3
4. MAINTENANCE AND INSPECTION	
(1) Dismounting of front screen .....	4
(2) Dismounting of operation panel .....	4
5. POINTS AND METHODS OF ADJUSTMENT	
(1) CPU P.C.Board .....	5
(2) Adjustment of Semi-Fixed Resistors .....	6
(3) Video Monitor .....	7
6. WIRING AND CONNECTION .....	8
7. NAME OF EACH PART	
(1) Body .....	9
(2) Operation Panel Assembly .....	11
8. PARTS LIST .....	12

## C A U T I O N S

=====

1. P.C.Board should not be exposed direct to the sun. Direct sunshine is very harmful to LSI(memory element).
2. P.C.Board to be stored or transported should be wrapped by a conductive pouch or aluminum foil, because LSI and IC used in the machine are semiconductor integrated circuits of which basic element is MOS-FET.
3. When images on the Video Monitor screen are disturbed by powerful noise or other electrical causes, turn the main power off once and then on again.

## 2. SPECIFICATIONS

Power Consumption	:	118W
Size	:	600(W) × 850(D) × 1700(H)mm.
Weight	:	100 Kgs.
Number of Player	:	1 or 2 person(s)
Number of Junior	:	3 ~ 6 (Adjustable)
Accessories	:	Operation Manual : 1 copy Key for Back Door : 2 pcs. Key for Coin Box Door : 2 pcs. Fuse : 4 pcs.
		100~120V : 5A × 1, 4A × 2, 0.3A × 1
		220~240V : 4A × 2, 3A × 1, 0.3A × 1

NOTE: Specifications are subject to change for improvement without notice.


### 3. INSTALLATION OF THE MACHINE

#### 3-1 Cautions on installation

- (1) The power cord of the machine should not be connected to a wall outlet together with large load unit(s) such as motor, cooler, etc.
- (2) Turn the power off before setting and removing the P.C. Board and connectors. Carefully handle them.
- (3) Do not touch IC, LSI and other electronic parts on P.C. Board. Do not use a tester or the like on them. (They may be damaged by the inner voltage of the instruments.)
- (4) When exchanging a fuse, use a new one of the prescribed capacity.
- (5) The machine should be installed where it is not hot, keeping away from a heating appliance and direct sunshine.
- (6) The machine should be installed where it is not wet and dusty.
- (7) Do not touch the inside of the video monitor which has high tension units. Inform service station, if necessary.

#### 3-2 Earthing of machine


- (1) When the machine is installed in a wet place, it should be grounded to avoid accident by an electric shock.
  - a) Connect an earthing wire to the earthing terminal of the machine.
  - b) The opposite end of the earthing wire should be connected to an earthing bar which is firmly inserted into the ground.
- (2) Cautions
  - a) Do not connect the earthing wire to a water pipe, because polyvinyl-choloride pipes are sometimes used in the water lines and, if so, the electronic continuity is cut at the points.
  - b) Do not connect the earthing wire to the gas pipe absolutely. That is very dangerous.

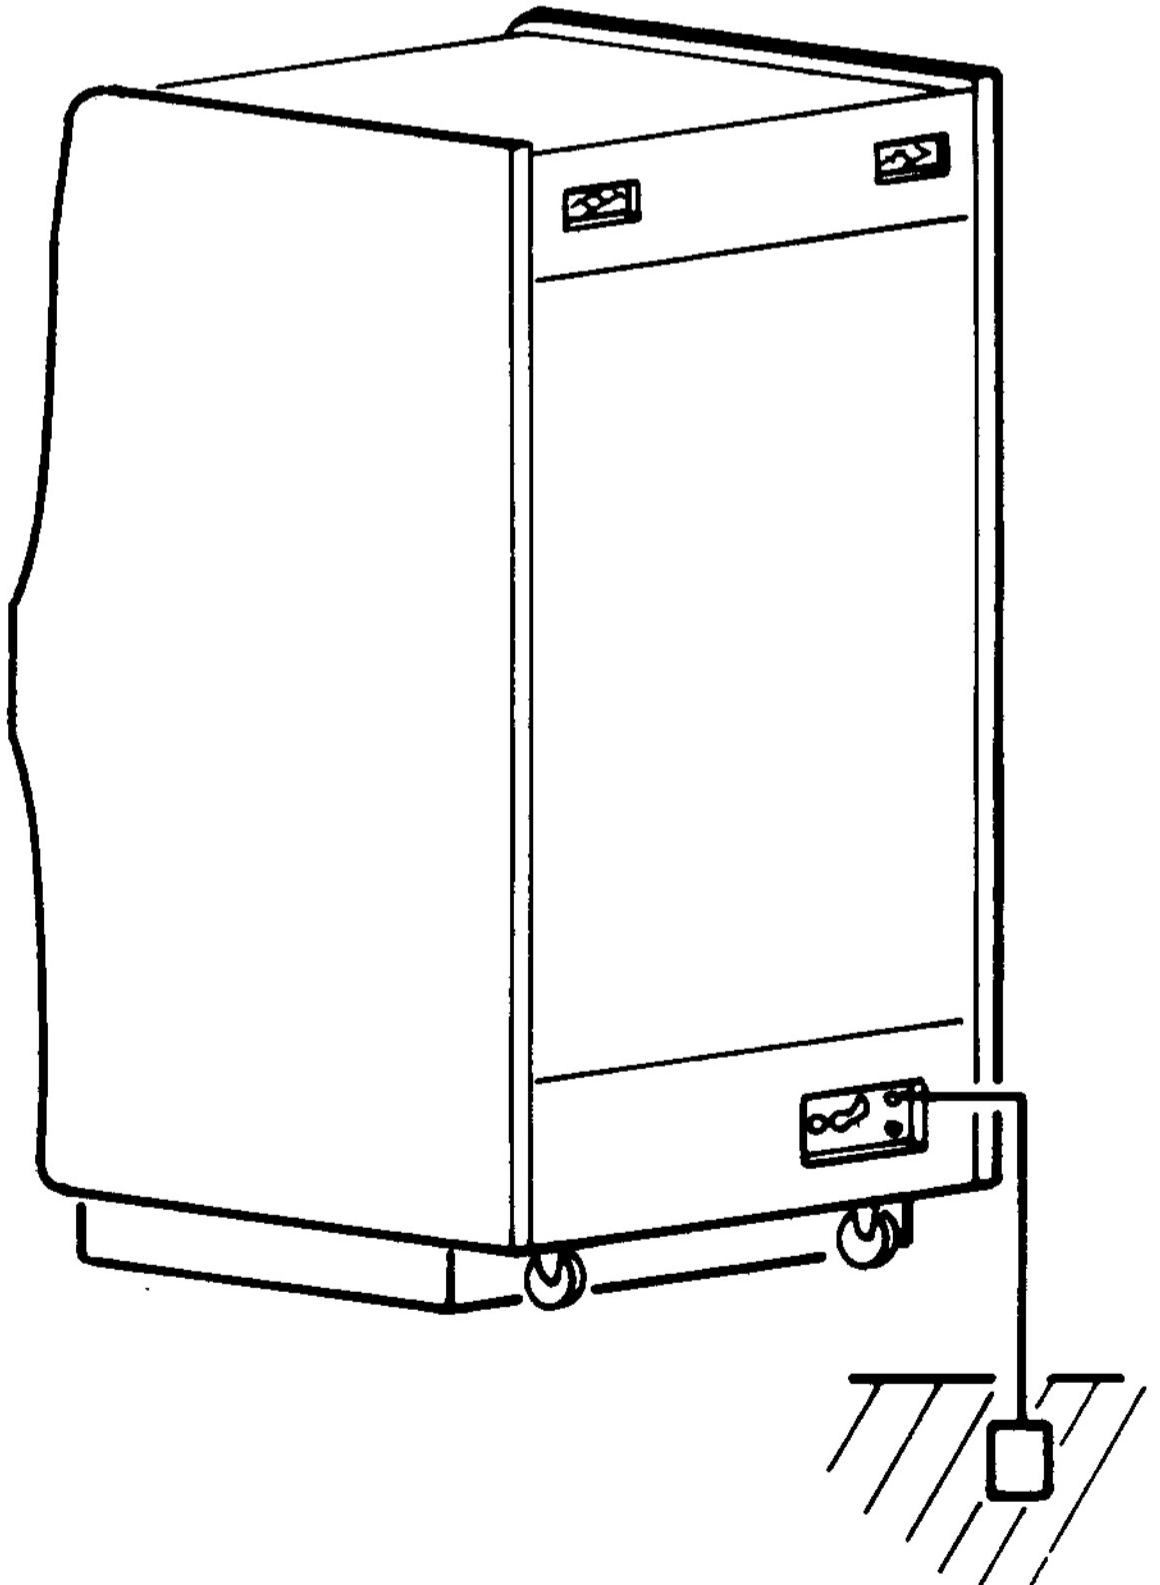


#### 4. MAINTENANCE AND INSPECTION

##### 4-1 Dismounting of front screen

Opening the back door, pull the front screen clamp which is mounted under the top plate. Pull the front screen upward while pushing and then pull toward you.

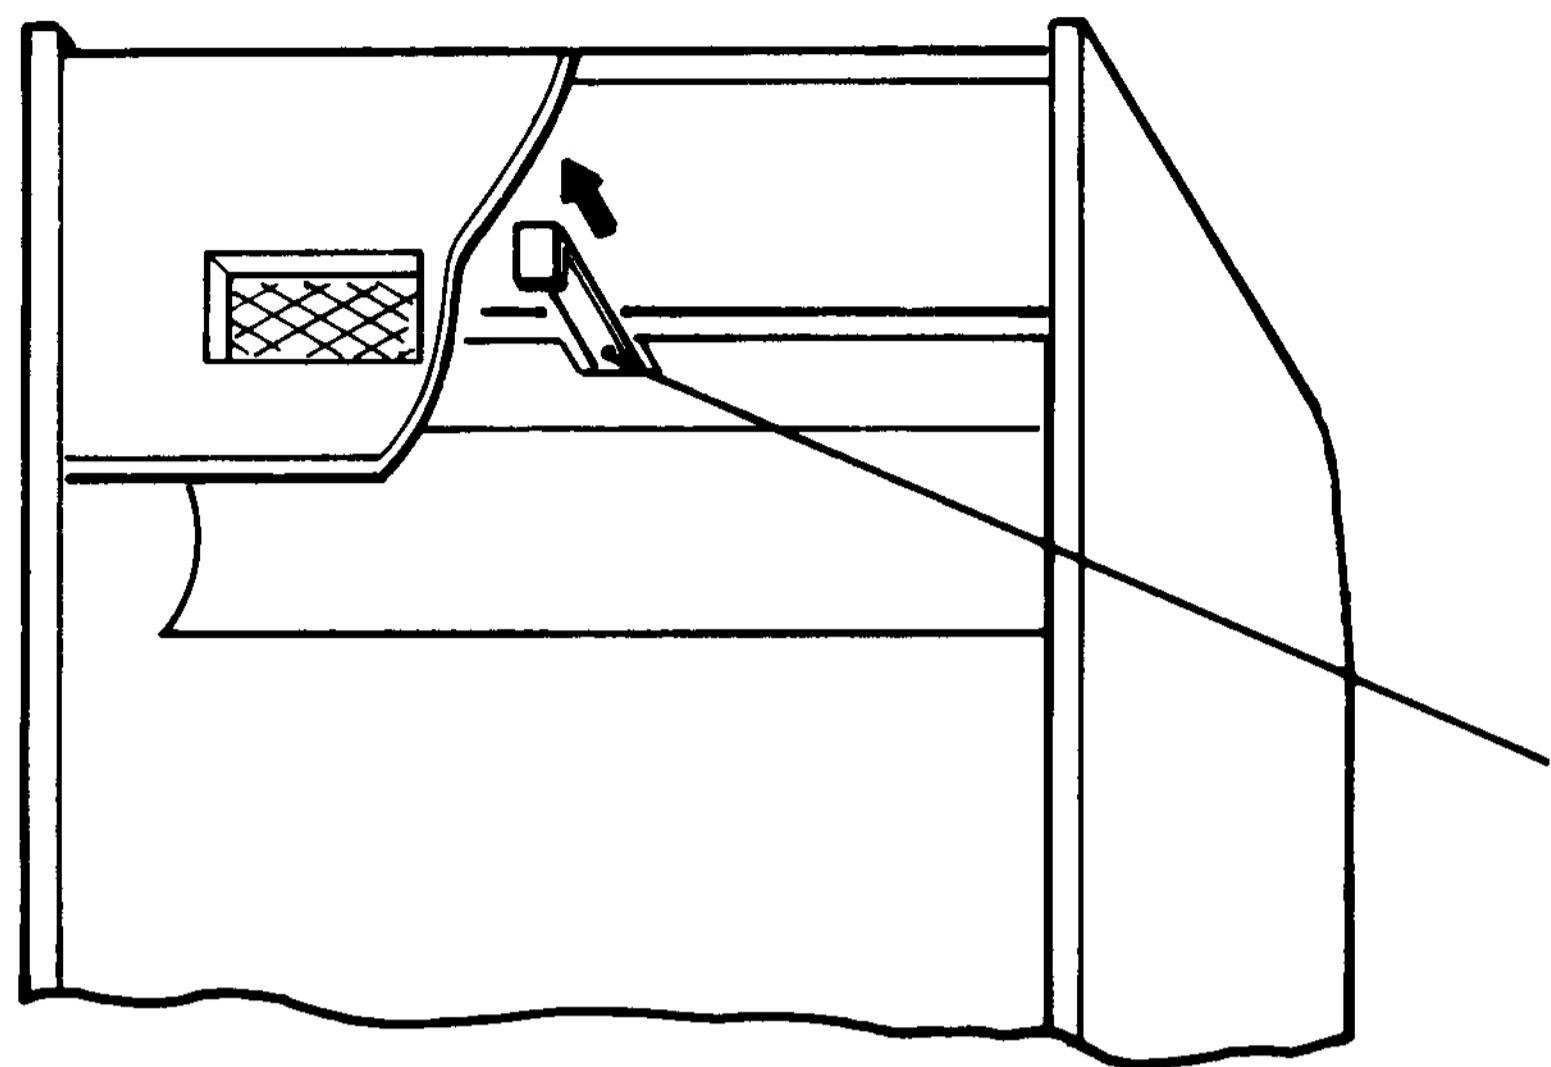

Front Screen Clamp

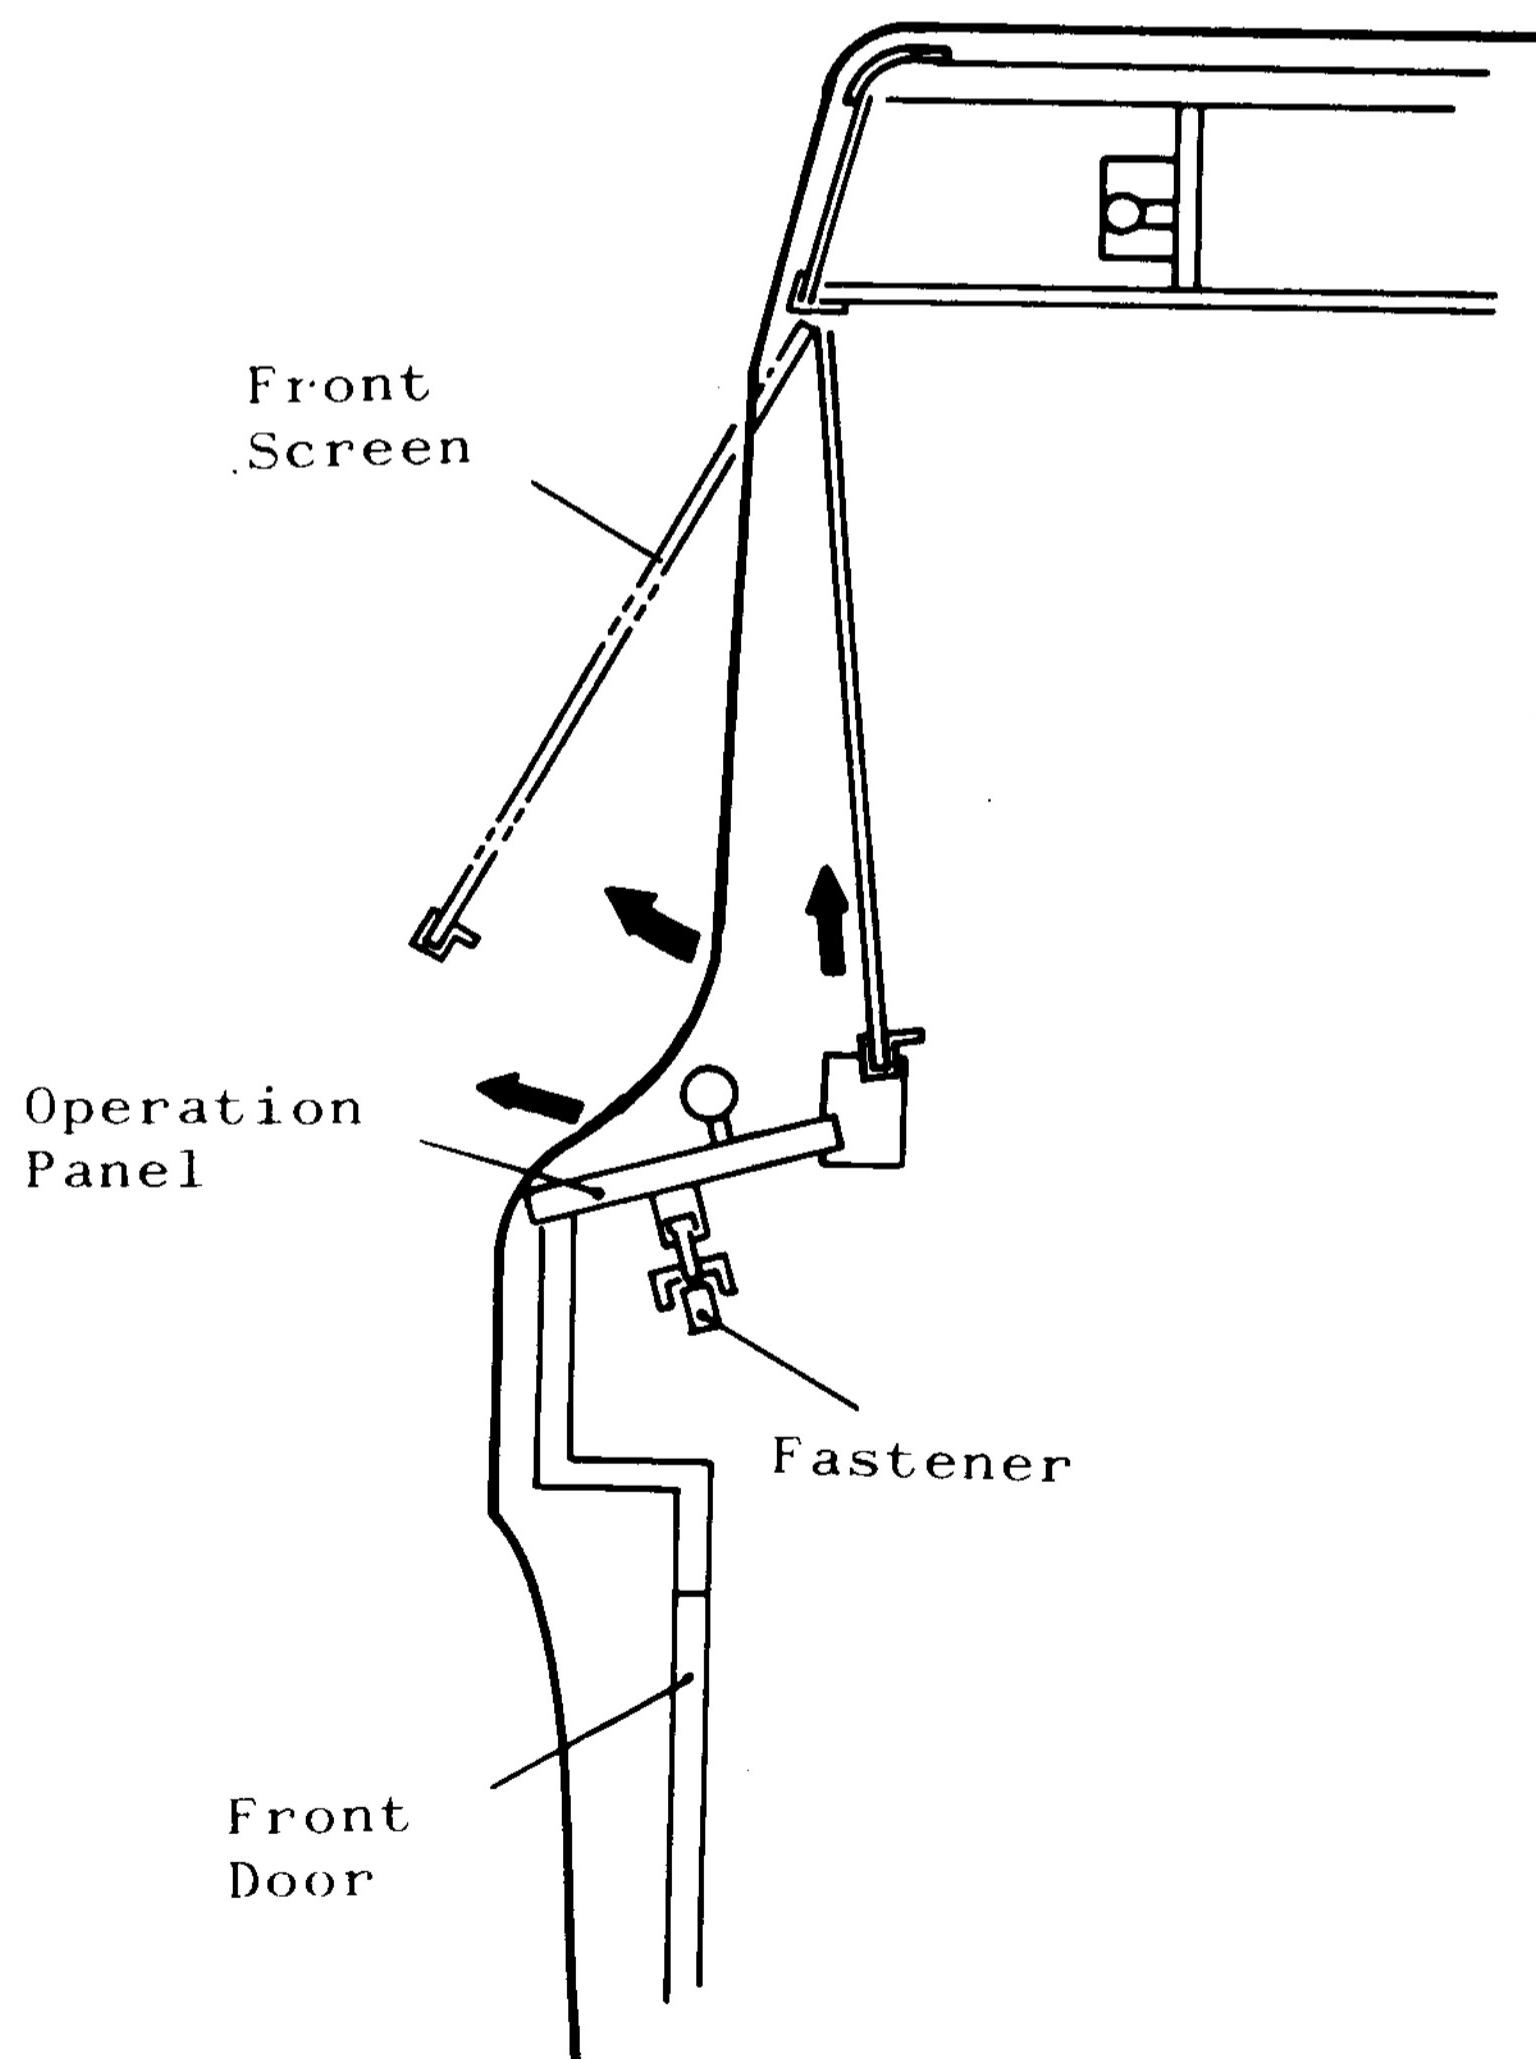


##### 4-2 Dismounting of operation panel

To dismount the operation panel for maintenance or inspection of the Control Unit or Micro Switch, open the front door and unfasten the fastener.

## 5. POINTS AND METHODS OF ADJUSTMENT

### 5-1 CPU P.C.Board

The number of Junior , score level, the number of coin and type of machine can be set with the switches on CPU P.C.Board according to the diagram below.

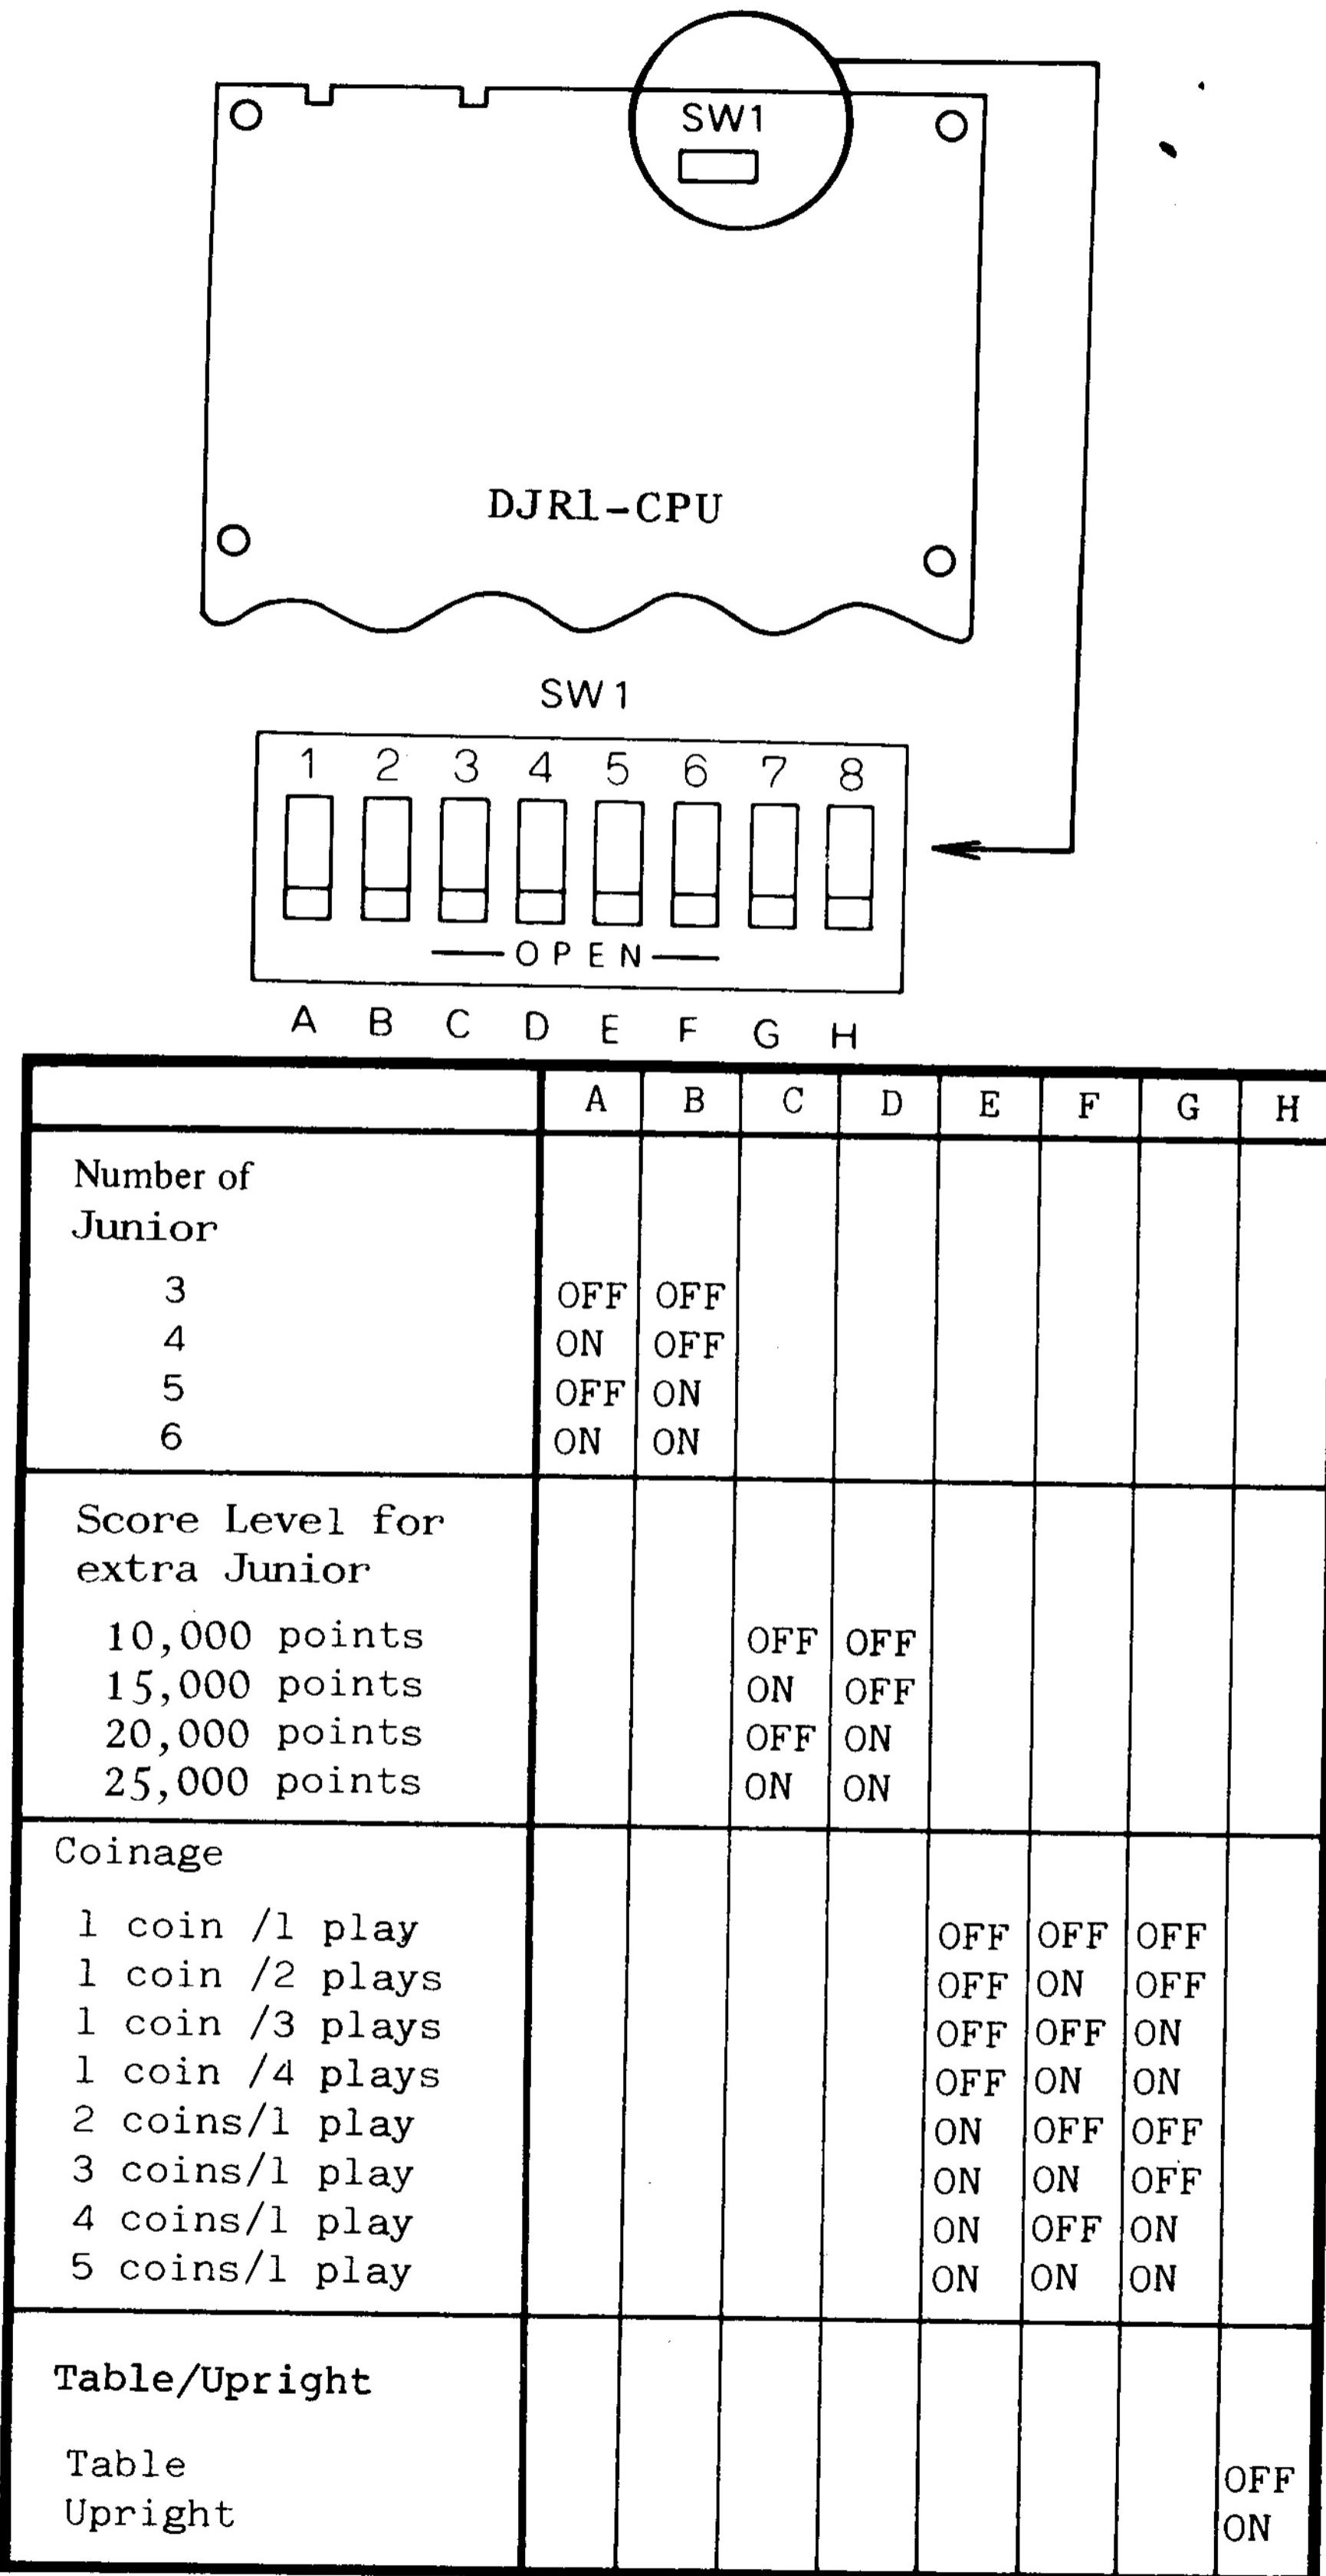


NOTE : Keep the switch H always at the ON position.

## 5-2 Adjustment of Semi-Fixed Resistors

### VIDEO P.C. Board



Semi-fixed resistors, VR1 and VR2 on VIDEO P.C. Board are used to adjust video monitor screen.

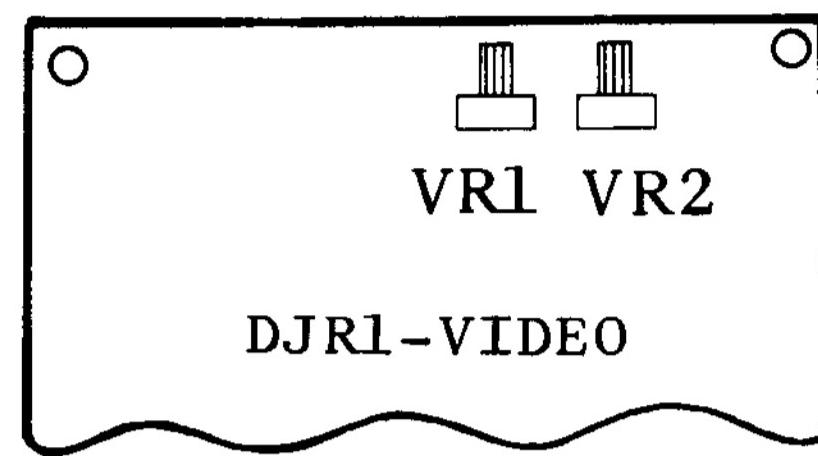

VIDEO P.C. Board


VR1	50KΩ 1/3W top type white knob	Turn right to move image downward.
VR2	50KΩ 1/3W top type white knob	Turn right to move image leftward

### 5 -3 Video Monitor

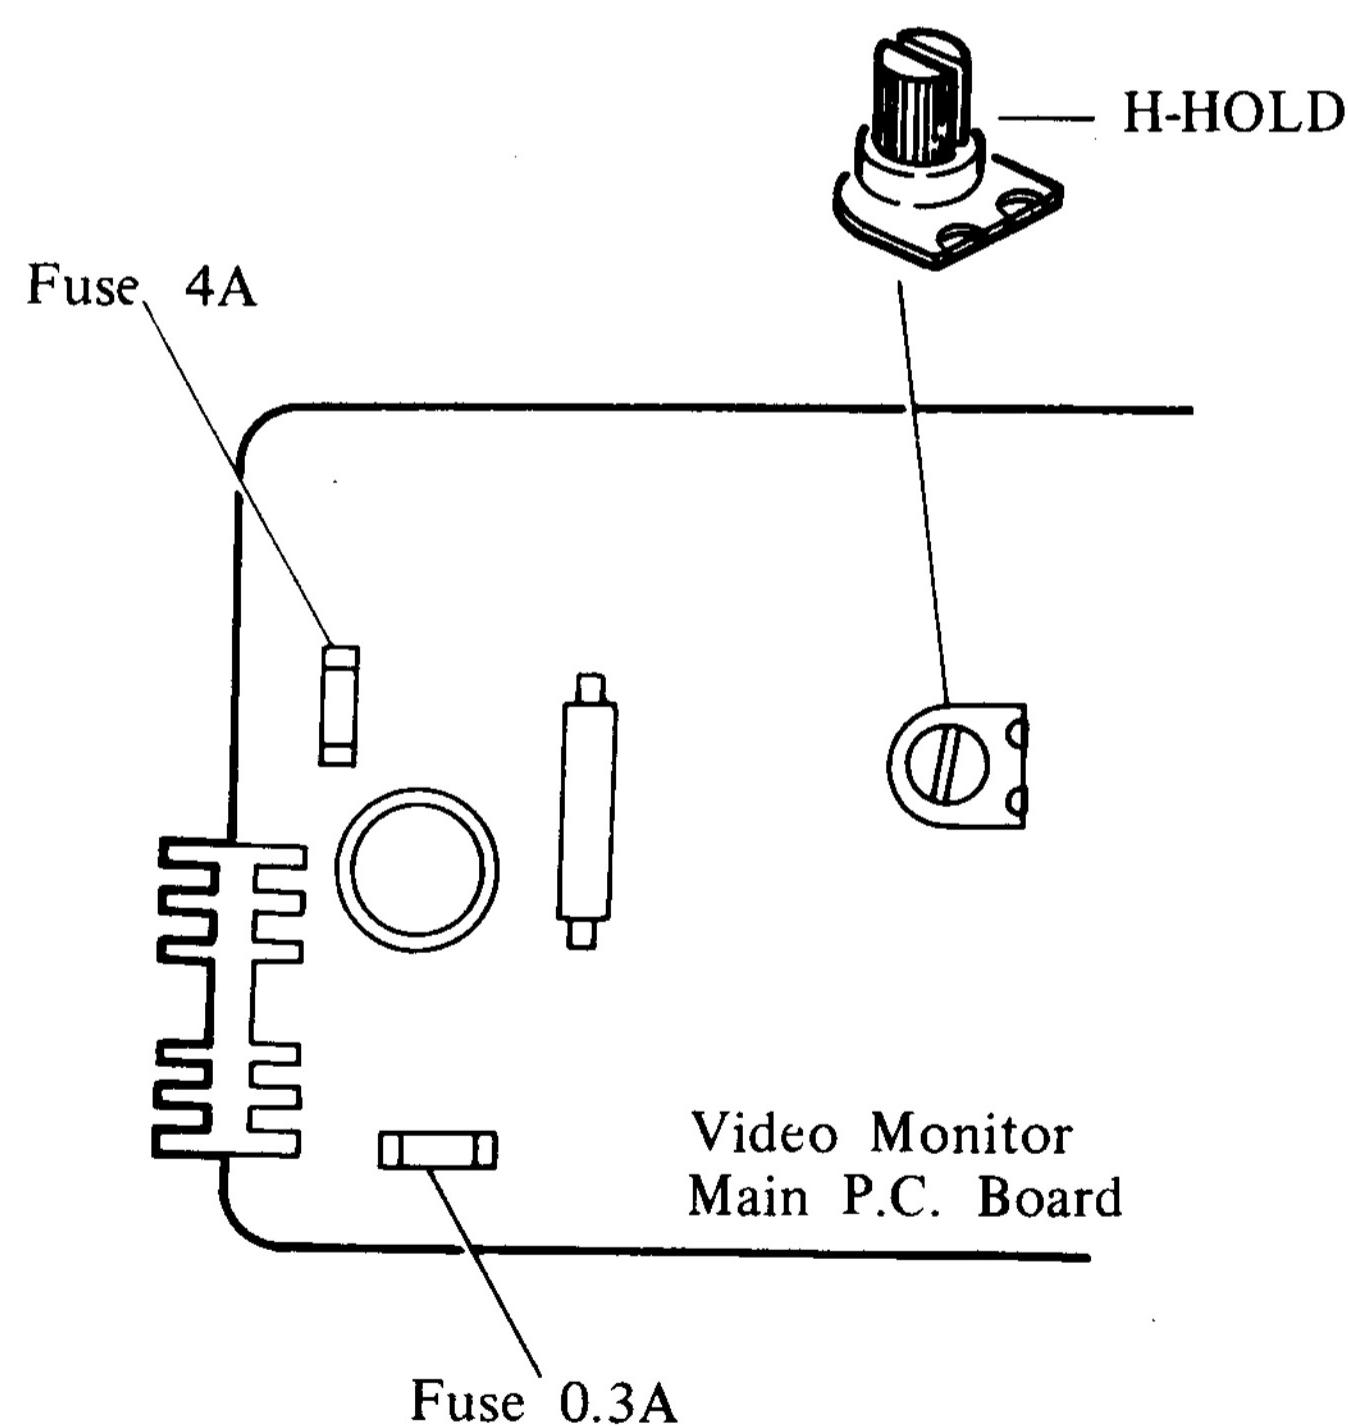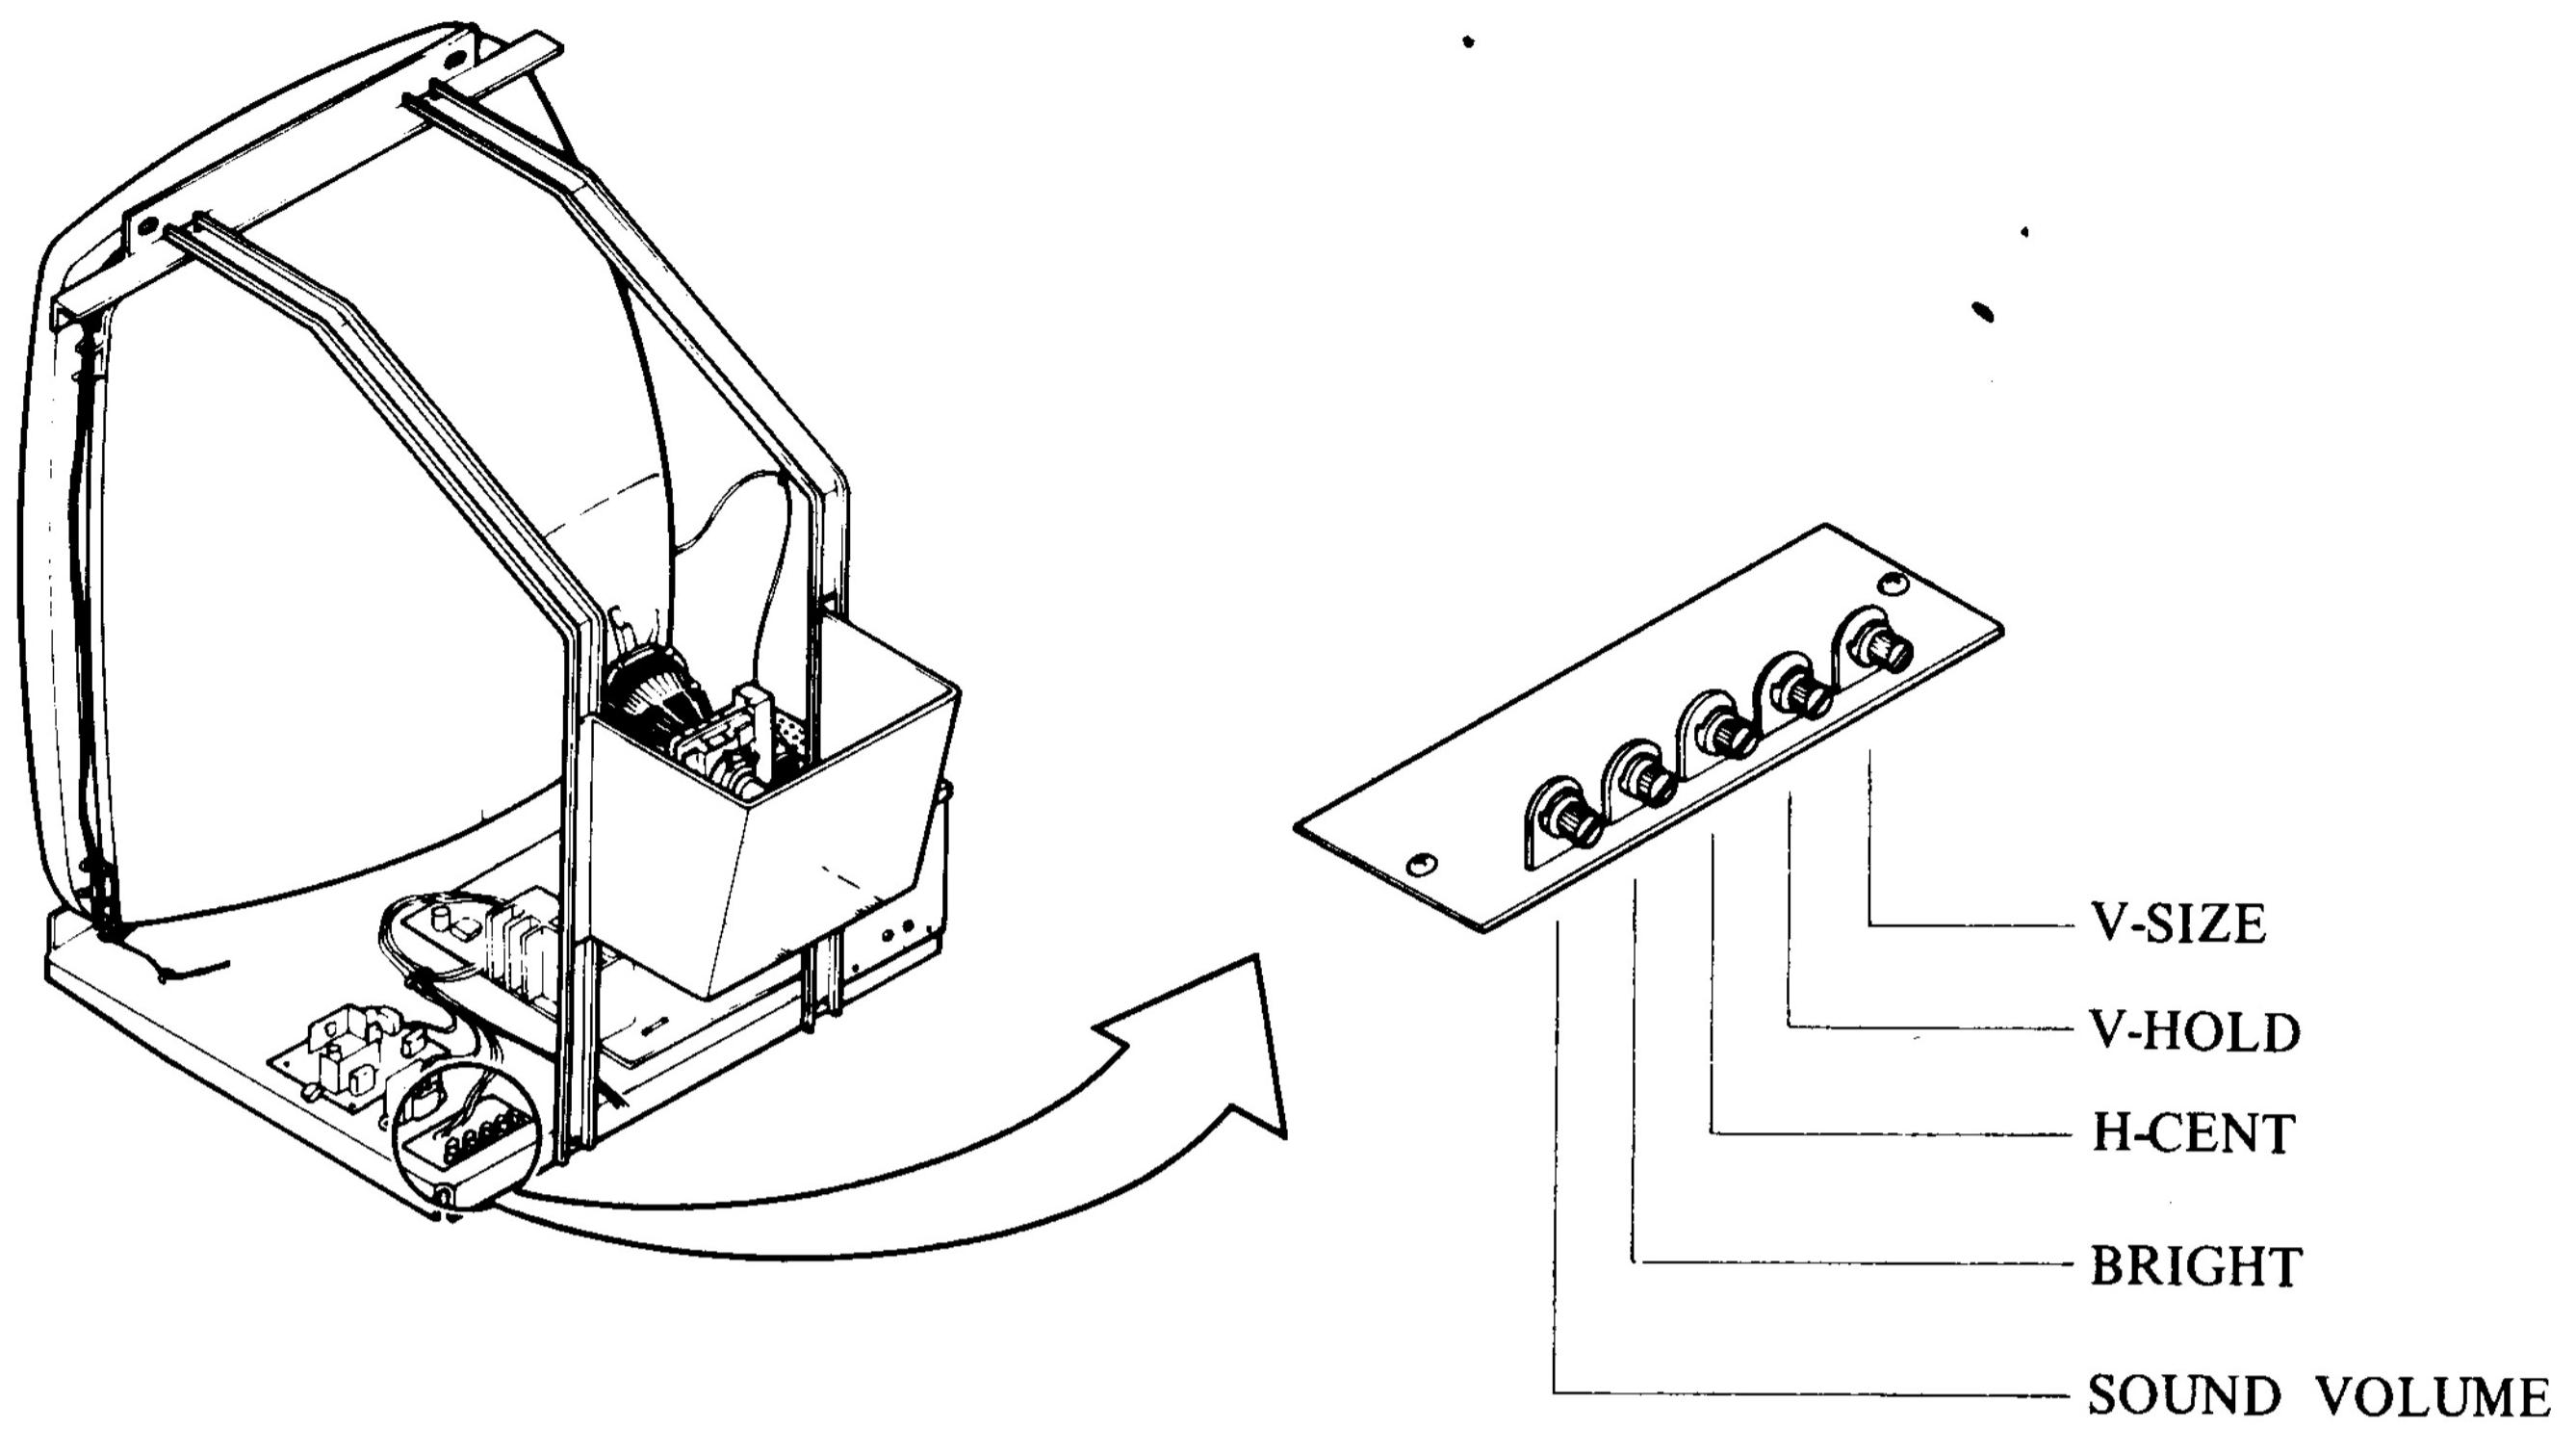


NOTE : Do not touch the inside of the Video Monitor in which many parts are supplied with high tension.


## 6. WIRING AND CONNECTION

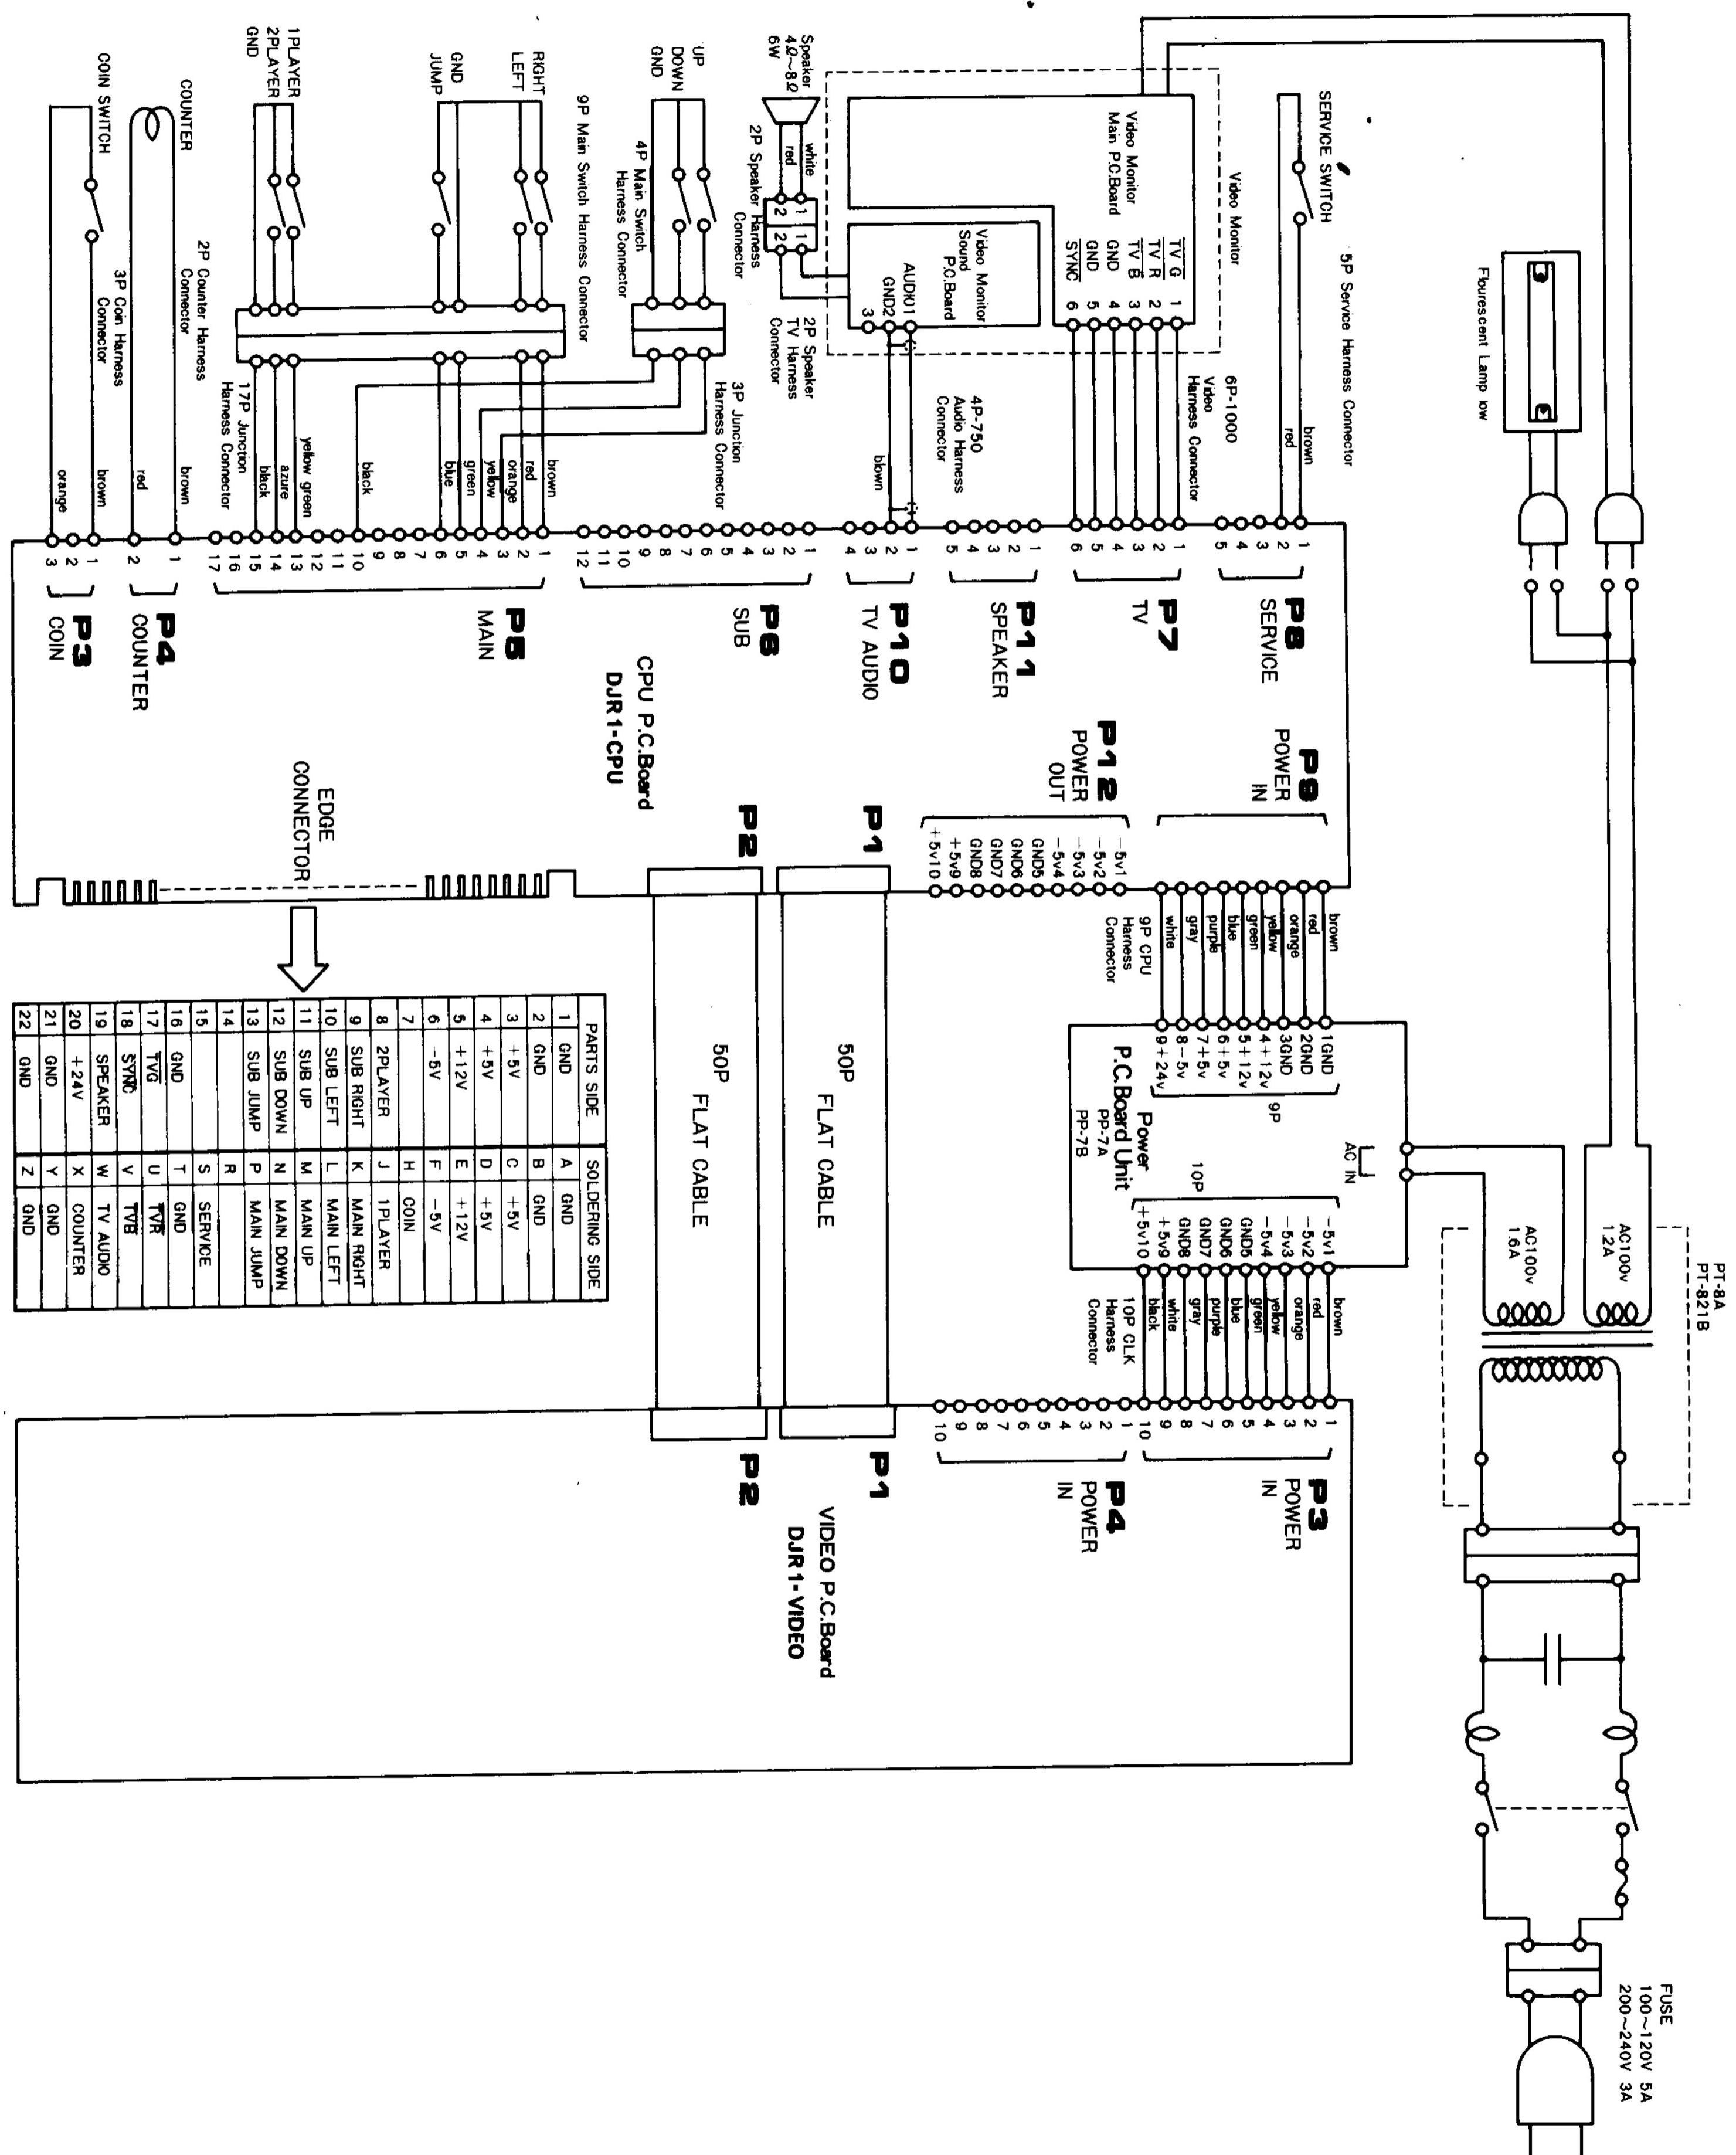

## 7. NAME OF EACH PART


### (1) Body

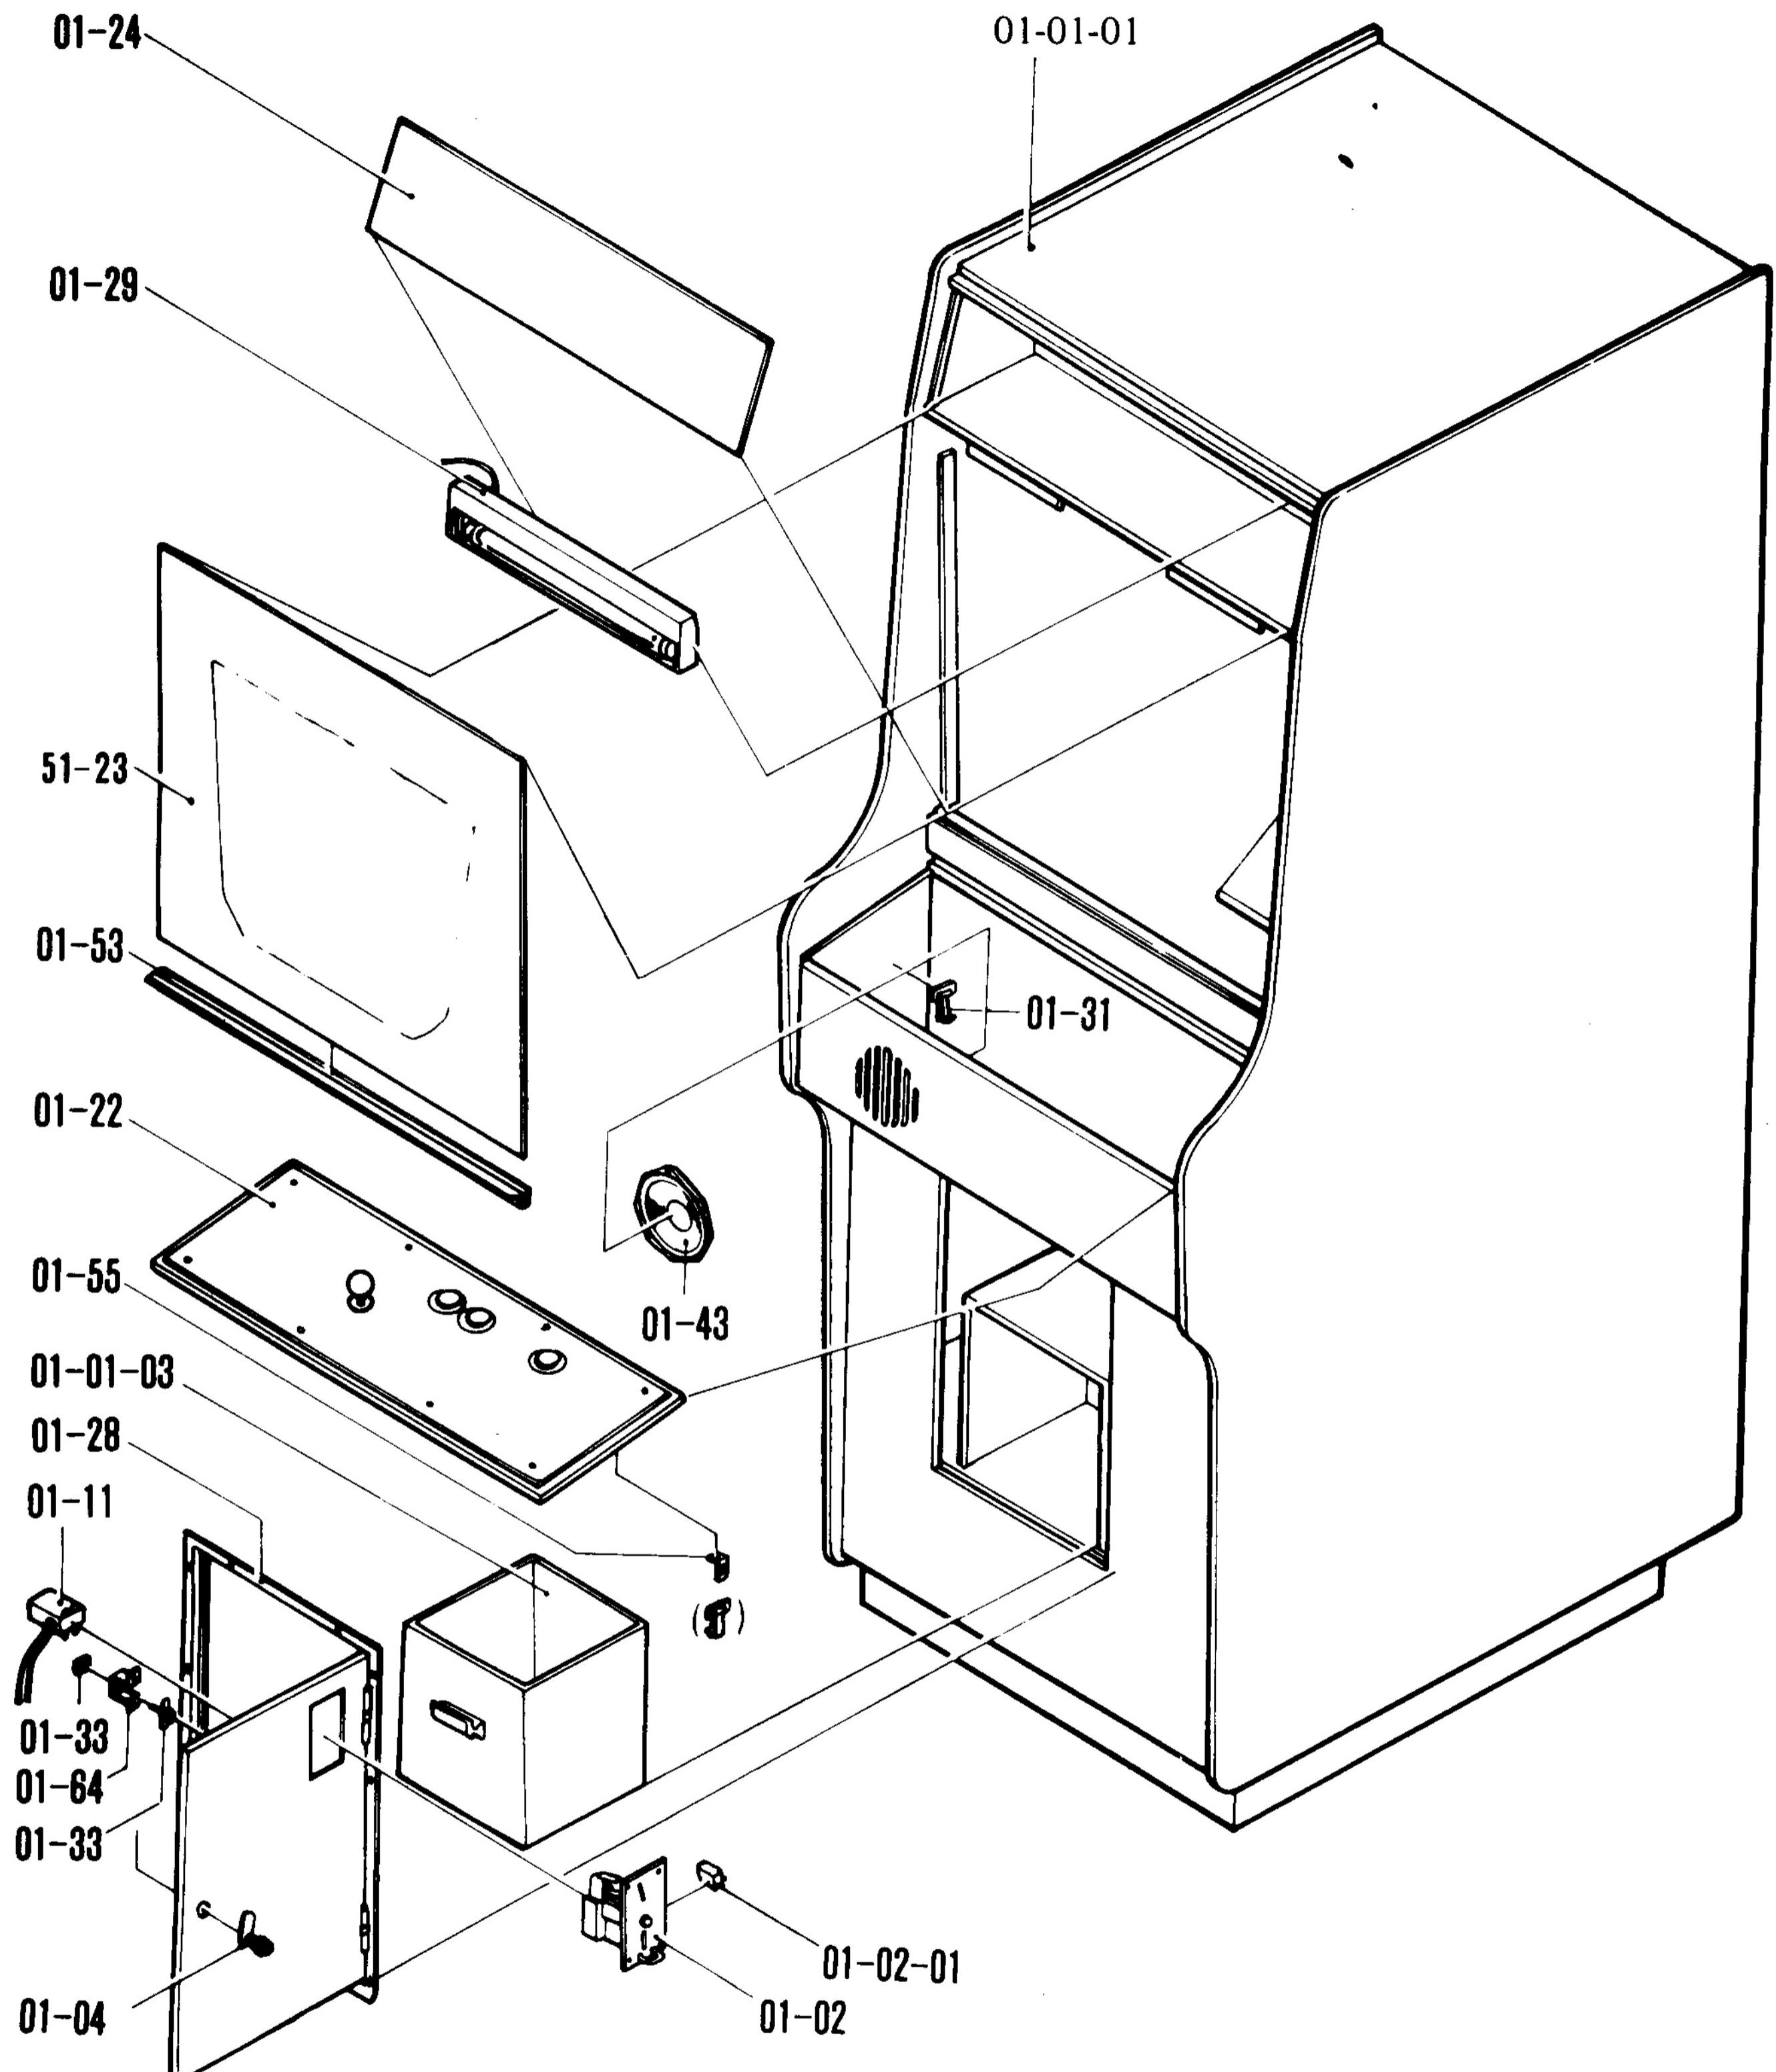

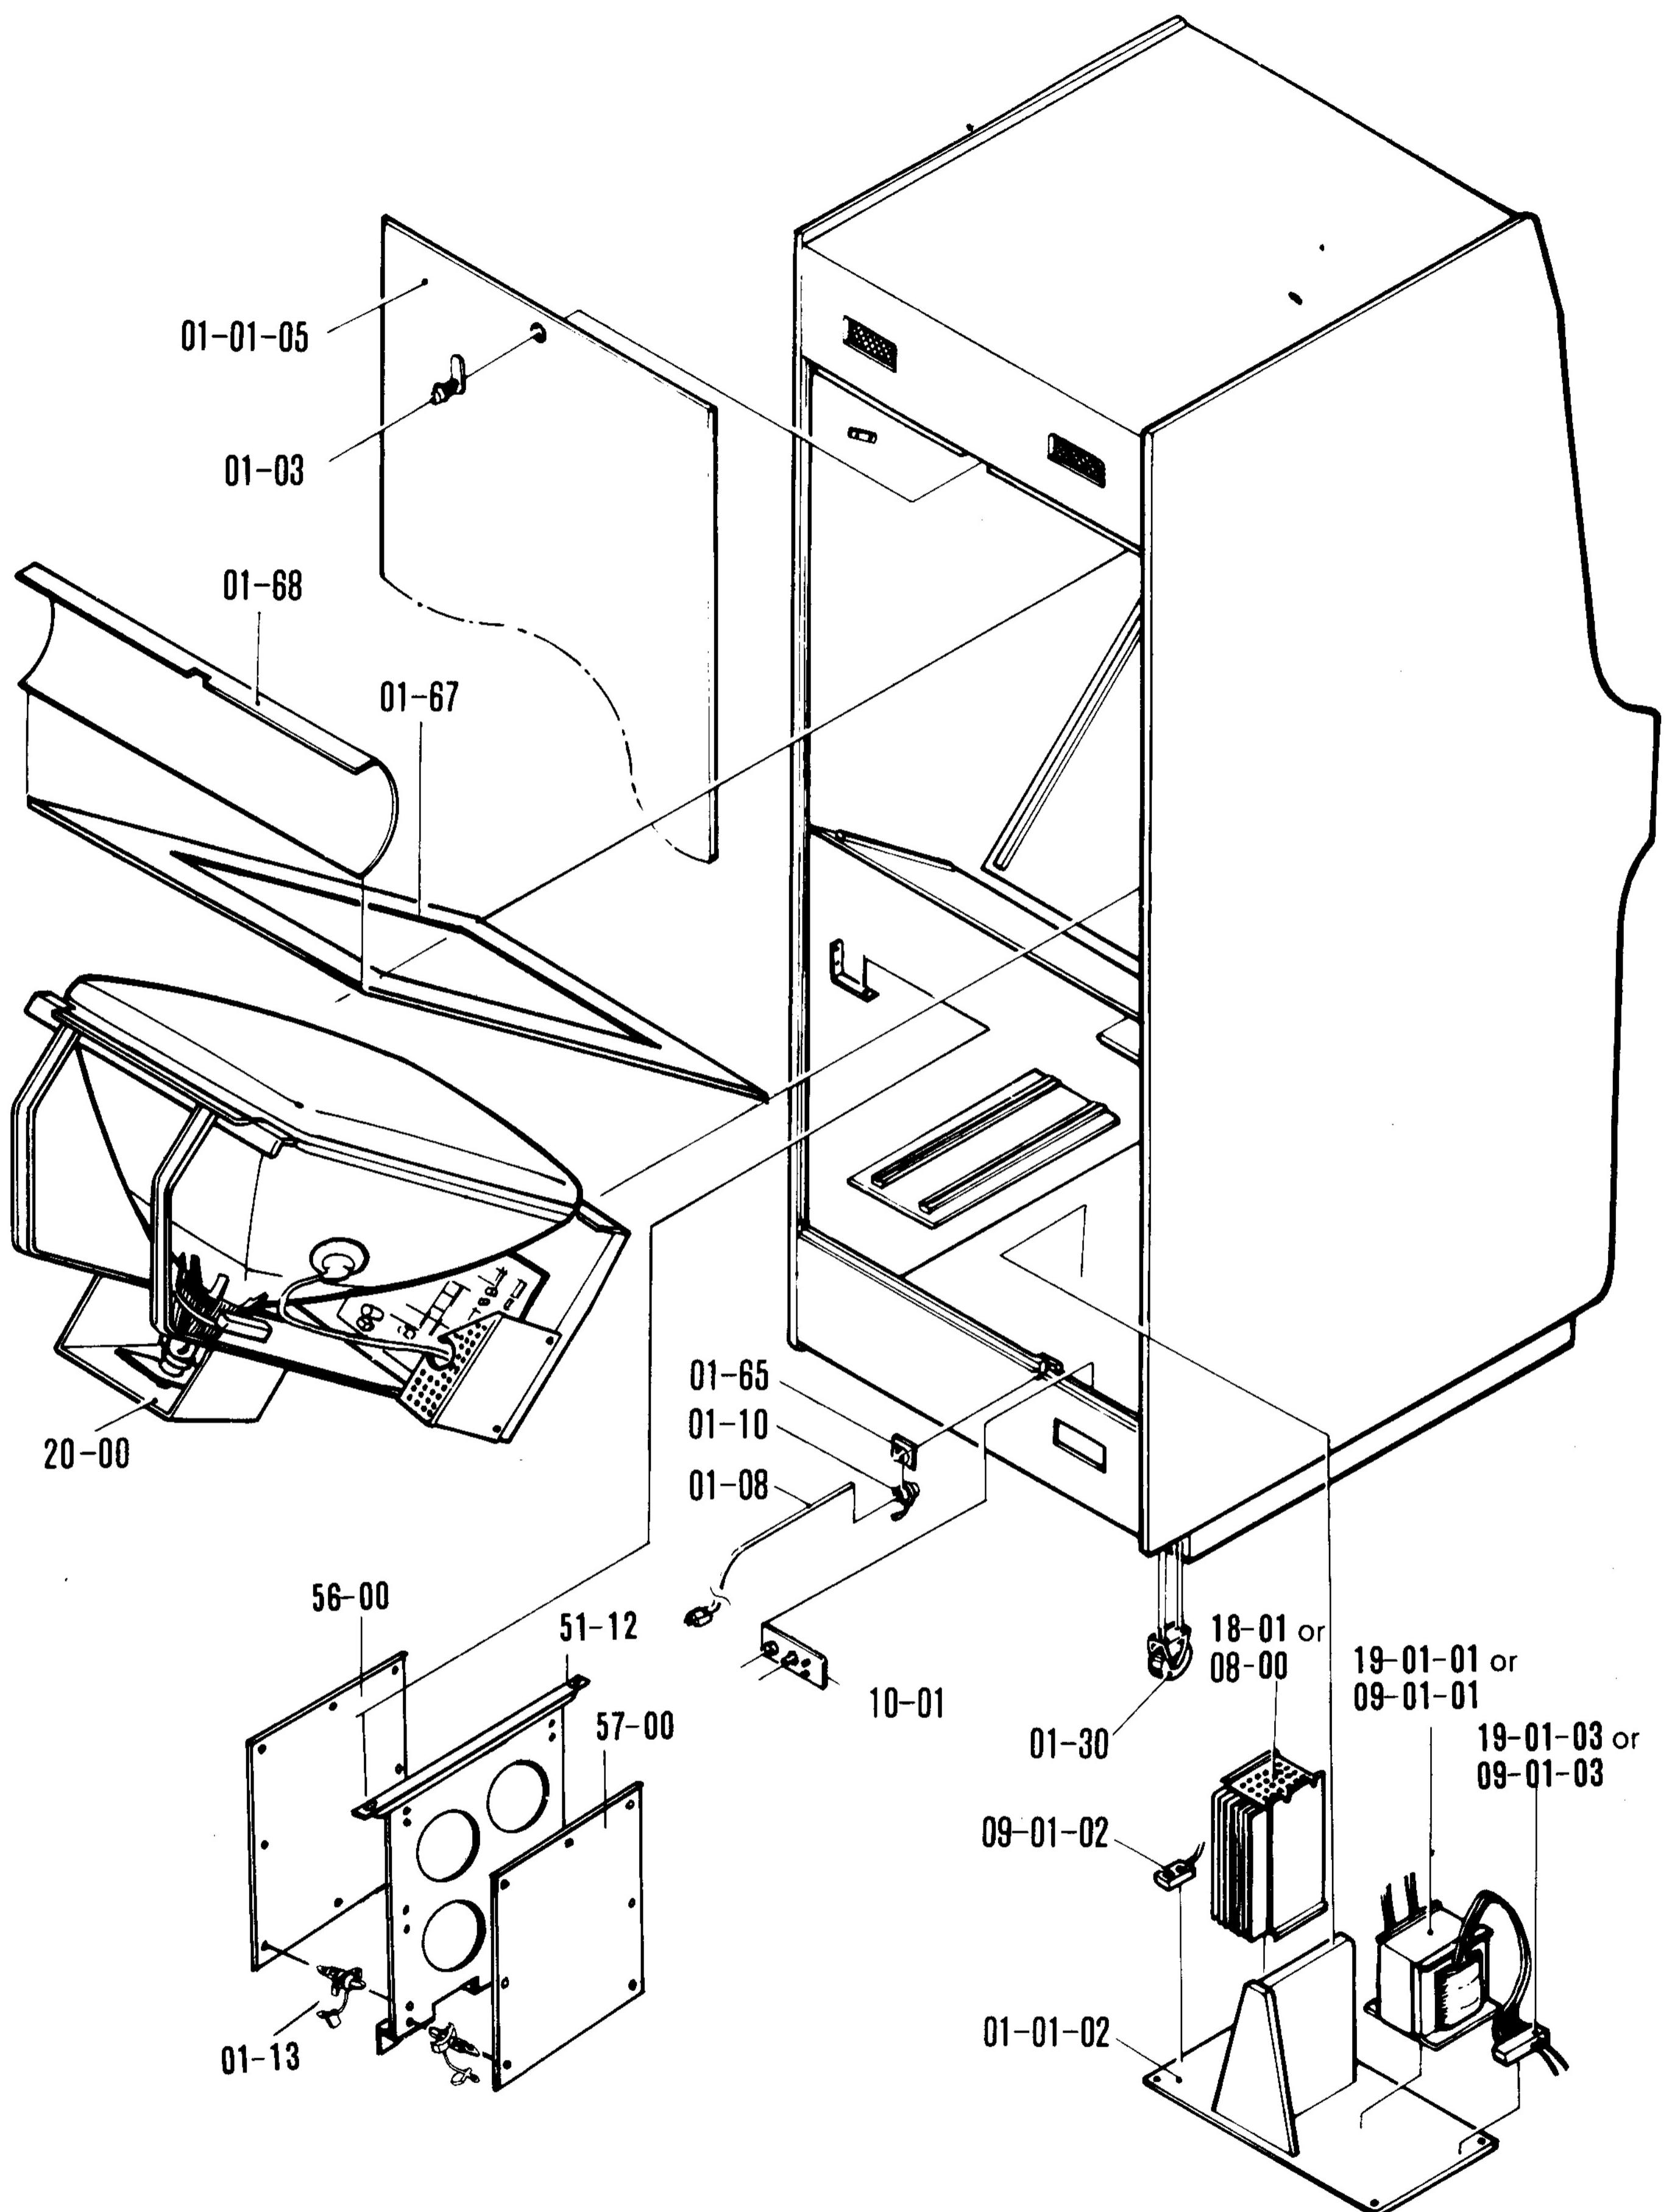

23-50 4 Way Control Lever A'ssy

(2) Operation Panel Assembly

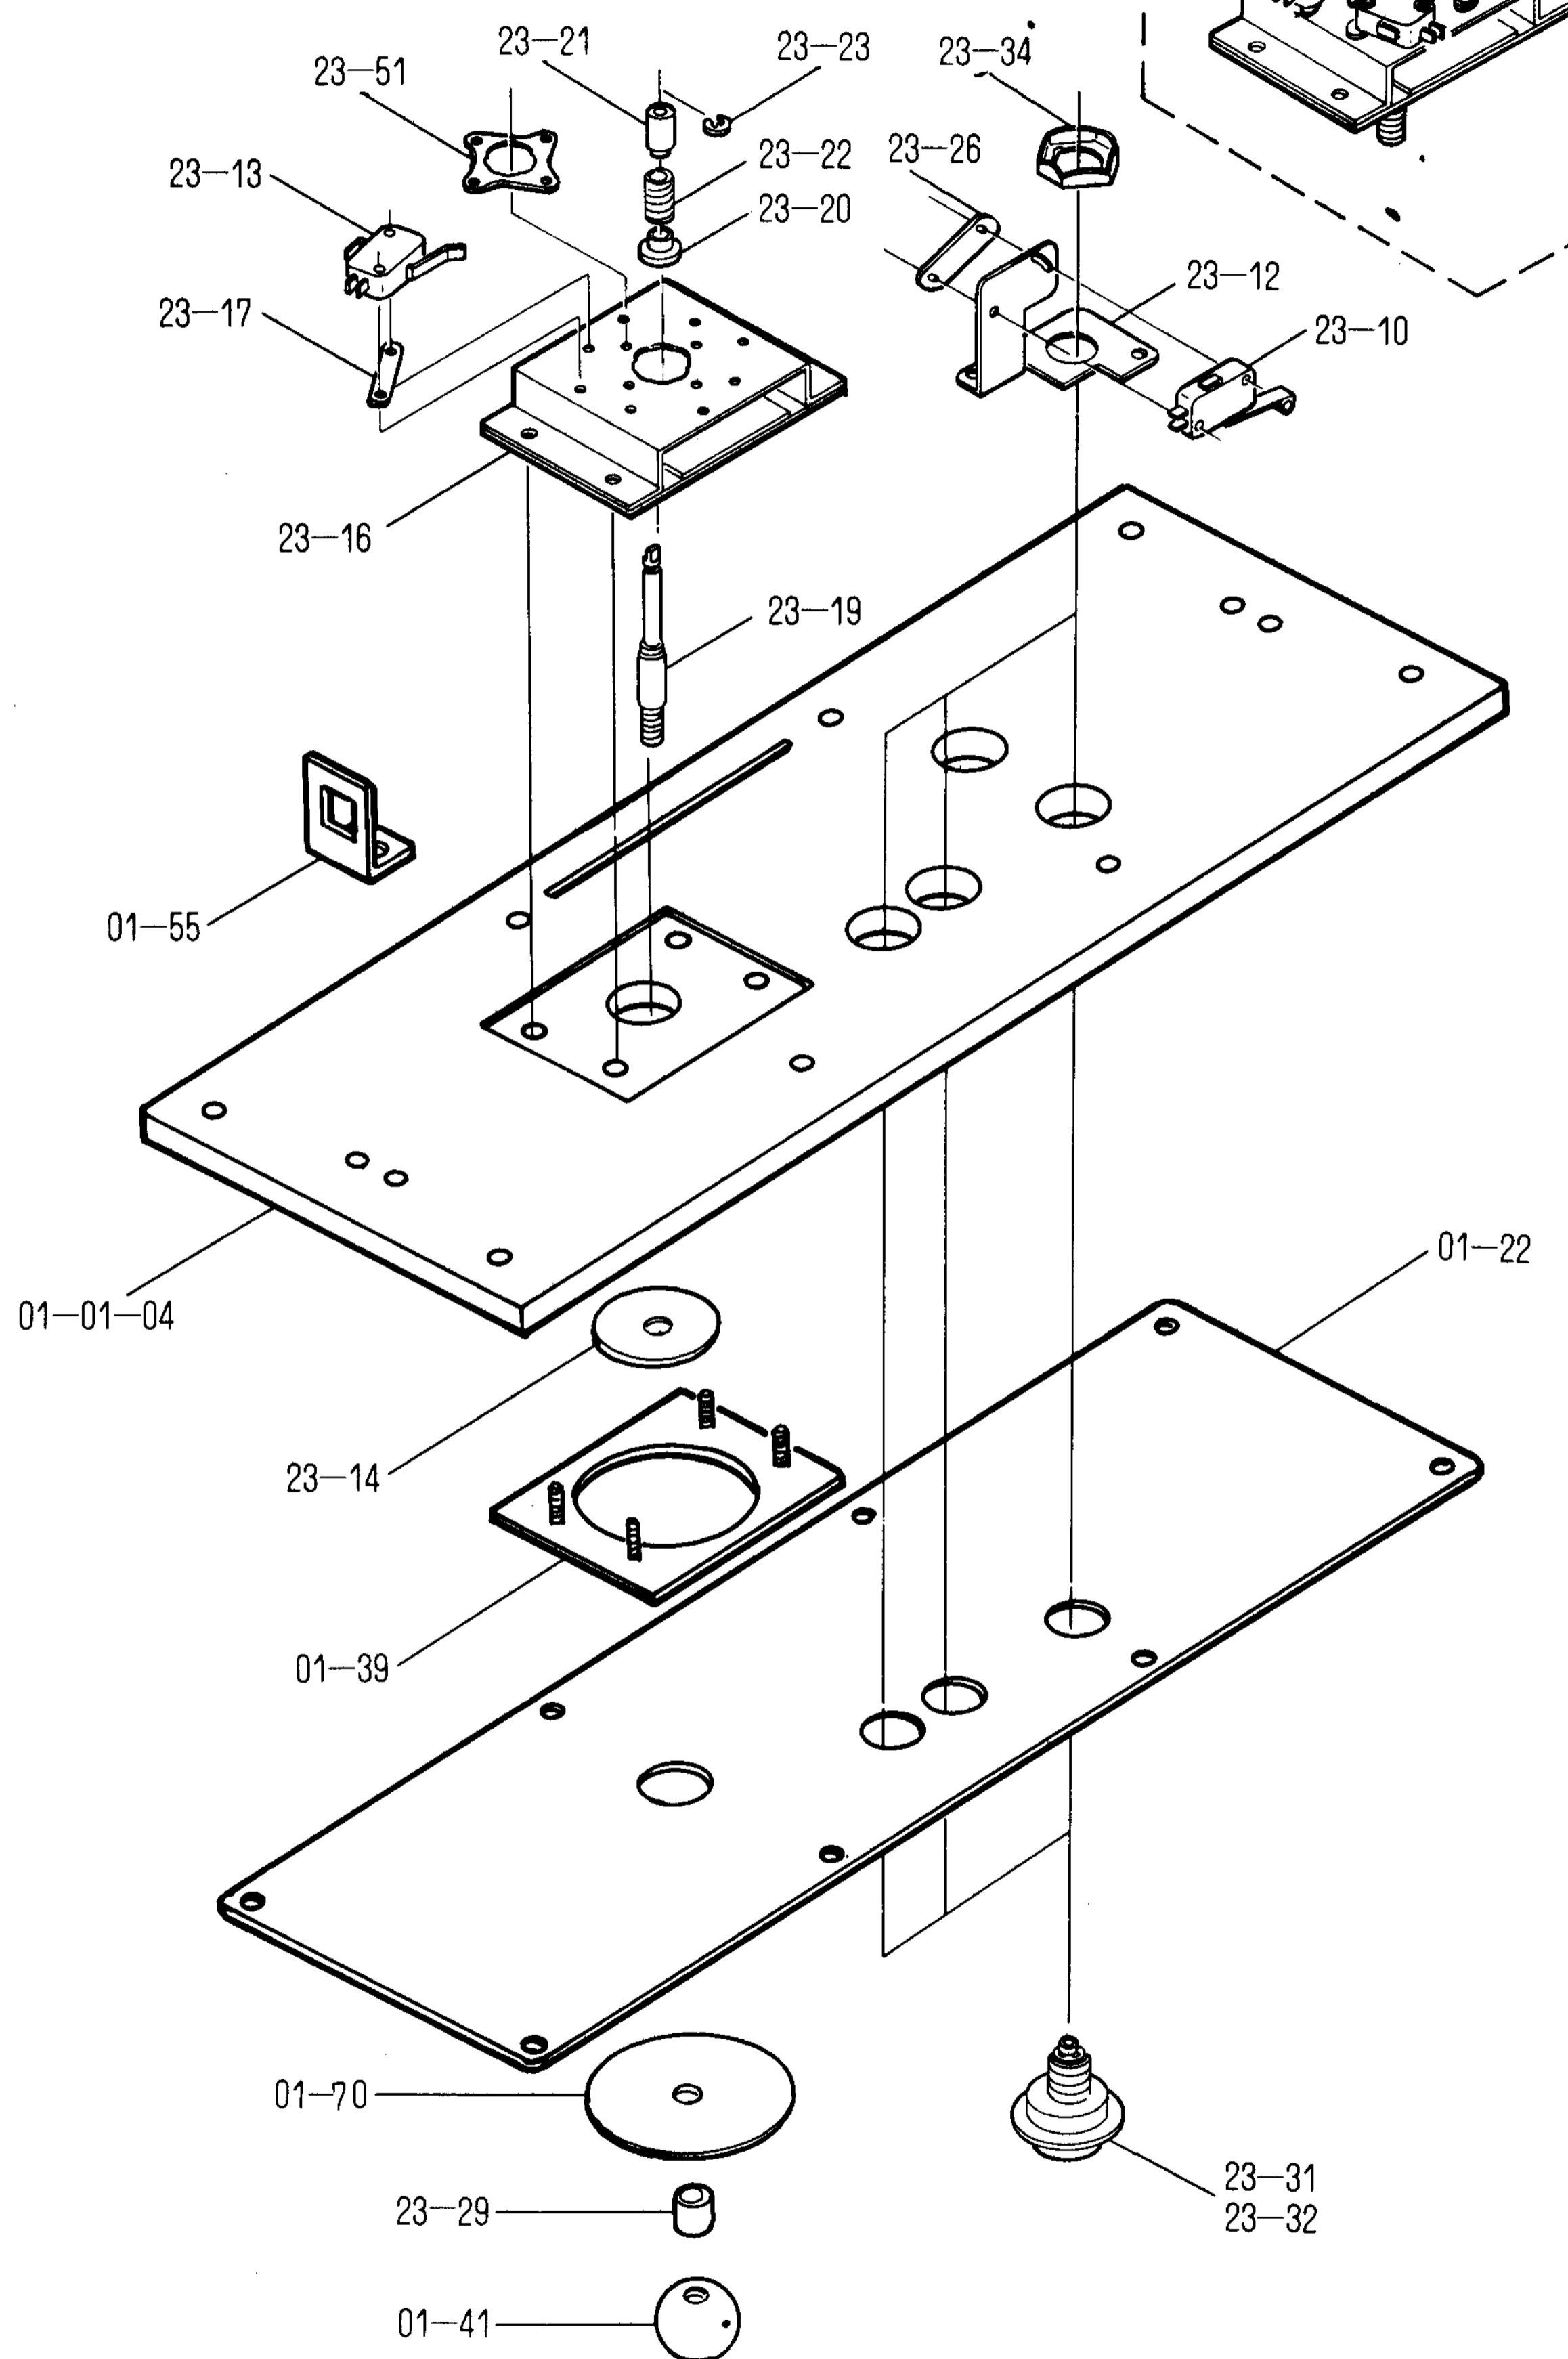

## 8. PARTS LIST

### 1. DJR-Body

No.	Name of Parts	Q'ty	Remarks	FOB Japan per pc.
DJRU-01-01-01	Body	1		
DJRU-01-01-02	Transformer Base	1		
DJRU-01-01-03	Cash Box	1		
DJRU-01-01-04	Control Lever Ass'y Base	1		
DJRU-01-01-05	Back Door	1		
DJRU-01-02	Coin Selector	1	T	
DJRU-01-02-01	Coin Switch	1	T	
DJRU-01-03	Back Door Lock	1		
DJRU-01-04	Front Door Lock	1		
DJRU-01-08	Power Cord	1		
DJRU-01-10	Strain Relief Bushing	1	T	
DJRU-01-11	Game Counter	1	T	
DJRU-51-12	TKG4 P.C.Board Mounting Bracket	1		
DJRU-01-13	P.C.Board Support	16		
DJRU-01-22	Operation Panel	1		
DJRU-51-23	Front Screen	1		
DJRU-01-24	Name Plate	1		
DJRU-01-28	Front Door Ass'y	1		
DJRU-01-29	Fluorescent Lamp Ass'y	1		
DJRU-01-30	Caster	2		
DJRU-01-31	Operation Panel Ass'y Fastener (A)	2		
DJRU-01-33	Service Switch	1	T	
DJRU-01-39	Control Lever Ass'y Mounting Plate	1		
DJRU-01-41	Control Lever Knob	1		
DJRU-01-43	Speaker	1		
DJRU-01-53	Front Screen Frame (Lower)	1		
DJRU-01-55	Operation Panel Ass'y Fastener (B)	2		
DJRU-01-64	Service Switch Bracket	1		
DJRU-01-65	Strain Relief Bushing Plate	1		
DJRU-01-67	Blind Cardboard (Large)	1		
DJRU-01-68	Blind Cardboard (Small)	1		
DJRU-01-70	Control Knob Plate	1		
DJRU-56-00	VIDEO P.C.Board	1	(DJR1-VIDEO)	
DJRU-57-00	CPU P.C.Board	1	(DJR1-CPU)	
DJRU-08-00	(PP-7A) Power P.C.Board	1	T	
DJRU-18-01	(PP-7B) Power P.C.Board	1	T	

No.	Name of Parts	Q'ty	Remarks	FOB Japan per pc.
DJRU-09-01-01	(PT-8A) Power Transformer	1		
DJRU-19-01-01	(PT-821B) Power Transformer	1		
DJRU-09-01-02	2P Table Tap	1		
DJRU-09-01-03	Terminal Block	1	(Sexipolar)	
DJRU-19-01-03	Terminal Block	1	(Quadrupolar)	
DJRU-10-01	Power Switch Ass'y	1		
DJRU-13-01	10P CLK Harness Connector	1	T	
DJRU-13-02	2P Counter Harness Connector	1		
DJRU-13-03	9P CPU Harness Connector	1	T	
DJRU-13-04	3P Coin Harness Connector	1		
DJRU-13-05	5P Service Harness Connector	1		
DJRU-13-06	2P Speaker TV Harness Connector	1		
DJRU-13-07	4P-750 Audio Harness Connector	1	T	
DJRU-13-10	9P Main Switch Harness Connector	1		
DJRU-13-11	17P Junction Harness Connector	1		
DJRU-13-12	50P Flat Cable	2	T	
DJRU-13-17	2P Speaker Harness Connector	1		
DJRU-13-28	3P Junction Harness Connector	1		
DJRU-13-29	4P Main Switch Harness Connector	1		
DJRU-13-31	6P-1000 Video Harness Connector	1		
DJRU-20-00	Video Monitor	1	(20-5F)	
DJRU-23-10	Micro Switch	3		
DJRU-23-12	Switch Button Bracket	3		
DJRU-23-13	Control Switch	4	T	
DJRU-23-14	Blind Plate	1	T	
DJRU-23-16	Bearing Bracket	1	T	
DJRU-23-17	Switch Spacer	4	T	
DJRU-23-19	Schaft	1	T	
DJRU-23-20	Spring Stopper	1	T	
DJRU-23-21	Switch Collar	1	T	
DJRU-23-22	Lever Spring	1	T	
DJRU-23-23	E Ring 4	1	T	
DJRU-23-26	Nut Plate	3		
DJRU-23-29	Control Knob Collar	1	T	
DJRU-23-31	Switch Button Ass'y (Blue)	2		
DJRU-23-32	Switch Button Ass'y (Orange)	1		
DJRU-23-34	Pal Nut	3		
DJRU-23-50	4 Way Control Lever Ass'y	1	T	
DJRU-23-51	4 Way Guide Plate	1	T	

## 2. VIDEO P.C.Board

No.	Name of Parts	Q'ty	Remarks	FOB Japan per pc.
DJR-56-00	VIDEO P.C.Board	1	Complete Set (TKG4-11-VIDEO)	
DJR-56-01	IC SN74LS00	2	Quadruple 2-Input Positive NAND Gates	
DJR-56-02	IC SN 74LS02	3	Quadruple 2-Input Positive Nor Gates	
DJR-56-03	IC SN74LS04	6	Hex Inverters	
DJR-56-04	IC SN74LS08	1	Quadruple 2-Input AND Gate	
DJR-56-05	IC SN74LS10	1	Tri 3 Input NAND Gate	
DJR-56-06	IC SN74LS20	4	Dual 4-Input Positive NAND Gate	
DJR-56-07	IC SN74LS30	1	8-Input Positive NAND Gate	
DJR-56-08	IC SN74LS32	1	Quadruple 2-Input Positive or Gate	
DJR-56-09	IC SN74LS74	4	Dual D-Type Edge-Triggered Flip-Flop w/Reset and Set	
DJR-56-10	IC SN74LS86	7	Quadruple 2-Input Executive OR Gate	
DJR-56-11	IC SN74LS109	1	Dual J-K Positive Edge-Triggered Flip-Flops with Preset and Clear	
DJR-56-12	IC SN74LS123	2	Dual Retriggerable Single Shot	
DJR-56-13	IC SN74LS139	1	Dual 2-to 4-Line Decoder/Demultiplexer	
DJR-56-14	IC SN74LS157	14	Quadruple 2-Line to 1-Line Data	
DJR-56-15	IC SN74LS161	4	Synchronous Presettable 4-Bit Binary Counter w/Direct Reset	
DJR-56-16	IC SN74LS163	2	4-Bit Binary Counter with Synchronous clear	
DJR-56-17	IC SN74LS174	1	Hex D-Type Flip-Flop w/Reset RAM	
DJR-56-18	IC SN74LS175	2	Quadruple D-Type Flip-Flop w/Reset	
DJR-56-19	IC-SN74LS245	2	Octal 3-State Bus Transceivers	
DJR-56-20	IC SN74LS273	4	Octal D-FFS	
DJR-56-21	IC SN74LS283	8	4 Bit Binary Full Adder	
DJR-56-22	IC SN74LS299	6	8 Bit Bidirectional Universal Shift/Storage	
DJR-56-23	IC SN74LS367	2	Hex Bus Driver w/3 State Output	
DJR-56-24	IC SN74LS373	2	Octal 3-State D-Latches	
DJR-56-25	IC SN74LS377	1	Octal D-Type Flip-Flops	
DJR-56-26	IC SN74S161	3	Schotkey 4-Bit Binary Counter with Direct Clear	
DJR-56-27	IC MB10105	1	Triple 2-3-2-Input OR/NOR Gates	
DJR-56-28	IC MB10116	1	Triple Line Receivers	
DJR-56-29	IC MB10124	4	Quadruple TTL-to-ECL Translators	
DJR-56-30	IC MB10125	3	Quadruple ECL-to-TTL Translators	
DJR-56-31	IC MB10136	1	Universal Hexadecimal Counter	
DJR-56-32	IC 2716	4	2048 x 8 Bit EP-ROM	
DJR-56-33	IC MB7074	2	ECL-RAM (MBM10422) with Radiator Fin	

No.	Name of Parts	Q'ty	Remarks	FOB Japan per pc.
DJR-56-34	IC 2732	2	4096 x 8 Bit EP-ROM	
DJR-56-35	IC MB93419	1	64x9 Bipolar RAM	
DJR-56-36	IC MB8114	2	1024 x 4-Bit Static MOS RAM	
DJR-56-37	IC MB8148L55	2	1024 x 4-Bit Static RAM .	
DJR-56-38	IC 24S10	1	256 x 4-Bit Bipolar P-ROM	
DJR-56-39	Resistor Array	4	RNSA-09P-551J 8-device 510Ω	
DJR-56-40	Resistor Array	1	RNSA-09P-102J 8-device 1kΩ	
DJR-56-41	Variable Resistor	2	50kΩ 1/3W	
DJR-56-42	Resistor (Carbon)	2	10kΩ 1/4W ± 5%	
DJR-56-43	Resistor (Carbon)	12	510Ω 1/4W ± 5%	
DJR-56-44	Resistor (Carbon)	2	15kΩ 1/4W ± 5%	
DJR-56-45	Resistor (Carbon)	4	2.2kΩ 1/4W ± 5%	
DJR-56-46	Resistor (Carbon)	2	4.7kΩ 1/4W ± 5%	
DJR-56-47	Resistor (Carbon)	1	22kΩ 1/4W± 5%	
DJR-56-48	Resistor (Carbon)	1	27kΩ 1/4W ± 5%	
DJR-56-49	Resistor (Carbon)	24	1kΩ 1/4W ± 5%	
DJR-56-50	Electrolytic Capacitor	2	220μF 16V	
DJR-56-51	Electrolytic Capacitor	2	1μF 50V	
DJR-56-52	Ceramic Capacitor	1	47pF 50V	
DJR-56-53	Ceramic Capacitor	128	0.01μF 50V	
DJR-56-54	Ceramic Capacitor	1	33pF 50V	
DJR-56-55	Ceramic Capacitor	2	10pF 50V	
DJR-56-56	Ceramic Capacitor	4	220pF 50V	
DJR-56-57	Ceramic Capacitor	2	68pF 50V	
DJR-56-58	Ceramic Capacitor	1	330pF 50V	
DJR-56-60	Polyester Film Capacitor	1	1000pF 50V (102kz)	
DJR-56-61	Polyester Film Capacitor	1	0.1μF 50V	
DJR-56-62	Polyester Film Capacitor	1	0.022μF 50V	
DJR-56-63	Transistor	2	2SC1215-R/S/T	
DJR-56-64	Crystal Oscillator	1	61.44MHz (HC-18U)	

## 3. CPU P.C.Board

No.	Name of Parts	Q'ty	Remarks	FOB Japan per pc.
DJR-57-00	CPU P.C.Board	1	Complete Set (TKG4-11-CPU)	
DJR-57-01	IC SN74LS00	2	Quadruple 2-Input Positive NAND Gates	
DJR-57-02	IC SN74LS02	2	Quadruple 2-Input Positive NOR Gate	
DJR-57-03	IC SN74LS04	6	Hex Inverters	
DJR-57-04	IC SN74LS08	1	Quadruple 2-Input AND Gates	
DJR-57-05	IC SN74LS32	1	Quadruple 2-Input Positive OR Gate	
DJR-57-06	IC SN74LS74	2	Dual D-Type Edge-Triggered Flip-Flop w/ Set and Reset	
DJR-57-07	IC SN74LS86	1	Quadruple 2-Input Exclusive OR Gate	
DJR-57-08	IC SN74LS123	4	Dual Retriggerable Single Shot	
DJR-57-09	IC SN74LS125	1	Quadruple 3 State Bus Buffers	
DJR-57-10	IC SN74LS132	1	Quadruple 2-Input NAND Schmitt Triggers	
DJR-57-11	IC SN74LS138	5	3-to-8-Line Decoder/Demultiplexer	
DJR-57-12	IC SN74LS139	1	Dual 2-to-4-Line Decoder/Demultiplexer	
DJR-57-13	IC SN74LS157	1	2-to-1-Line Data Selectors/Multiplexers	
DJR-57-14	IC SN74LS164	2	8-Bit Serial-In Parallel-Out Shift Register	
DJR-57-15	IC SN74LS174	3	Hex D-Type Flip-Flop	
DJR-57-17	IC SN74LS240	4	Octal Buffer/Line Driver/Line Receiver w/3-State	
DJR-57-18	IC SN74LS245	1	Octal 3-State Bus Transceivers	
DJR-57-19	IC SN74LS259	3	8-Bit Addressable Latches	
DJR-57-20	IC SN74LS367	6	Hex Bus Driver w/3 State Output	
DJR-57-21	IC SN74LS373	3	Octal 3-State D-latches	
DJR-57-22	IC SN74LS629	3	Voltage Control Oscillators	
DJR-57-23	IC MB8114	6	1024 x 4-Bit Static MOS RAM	
DJR-57-24	IC 2764	3	8192 x 8-Bit EP ROM	
DJR-57-25	IC Z80A	1	8-Bit Microprocessor	
DJR-57-26	IC 24S10	2	Bipolar ROM 256 x 4-Bit	
DJR-57-27	IC 8257-5	1	DMA Controller	
DJR-57-28	IC 2732	1	4096 x 8-Bit EP ROM	
DJR-57-29	IC MB8884	1	8-Bit Microprocessor	
DJR-57-30	IC MB3614	1	Lower Power Quadruple Operational Amplifiers	
DJR-57-31	IC 3192	1	Custom	
DJR-57-32	IC DAC08CQ	1	8-Bit Digital-to-Analog Converter	
DJR-57-33	IC CD4020B	1	14-Stage Binary Ripple Counter	

No.	Name of Parts	Q'ty	Remarks	FOB Japan per pc.
DJR-57-34	Transistor	4	2SC1815	
DJR-57-35	Transistor	1	2SC1384-R	
DJR-57-36	Transistor	4	2SC828-P/Q	
DJR-57-37	Transistor	2	2SA564-P/Q/R	
DJR-57-38	Diode	10	IS953	
DJR-57-39	Diode	1	W03B	
DJR-57-40	Dip Switch	1	B-8A	
DJR-57-41	Aluminium Electrolytic Capacitor	2	470μF 16V	
DJR-57-42	Electrolytic Capacitor	1	220μF 16V	
DJR-57-43	Electrolytic Capacitor	1	33μF 16V	
DJR-57-44	Electrolytic Capacitor	3	1μF 50V	
DJR-57-45	Electrolytic Capacitor	1	4.7μF 50V	
DJR-57-46	Electrolytic Capacitor	2	3.3μF 50V	
DJR-57-47	Electrolytic Capacitor	15	10μF 16V	
DJR-57-48	Electrolytic Capacitor	2	100μF 16V	
DJR-57-49	Electrolytic Capacitor	3	47μF 16V	
DJR-57-50	Ceramic Capacitor	3	0.068μF 25V	
DJR-57-51	Ceramic Capacitor	82	0.01μF 50V	
DJR-57-52	Ceramic Capacitor	1	0.022μF 25V	
DJR-57-53	Ceramic Capacitor	2	22pF 50V	
DJR-57-54	Ceramic Capacitor	2	0.47μF 50V	
DJR-57-56	Polyester Film Capacitor	1	0.01μF 50V	
DJR-57-57	Polyester Film Capacitor	1	0.22μF 50V	
DJR-57-58	Polyester Film Capacitor	1	0.022μF 50V	
DJR-57-59	Polyester Film Capacitor	1	0.0047μF 50V	
DJR-57-60	Polyester Film Capacitor	2	0.12μF 50V	
DJR-57-61	Polyester Film Capacitor	1	0.056μF 50V	
DJR-57-62	Tantalum Capacitor	3	10μF 16V	
DJR-57-63	Tantalum Capacitor	1	4.7μF 16V	
DJR-57-64	Tantalum Capacitor	2	22μF 16V	
DJR-57-65	Series Resistor Array	3	1kΩ PNSA-09P-102J	
DJR-57-66	Parallel Resistor Array	6	68Ω PNSB-08P-680J	
DJR-57-67	Series Resistor Array	1	4.7kΩ PNSB-09P-472J	
DJR-57-68	Resistor (Carbon)	6	47kΩ 1/4W ±5%	
DJR-57-69	Resistor (Carbon)	1	2kΩ 1/4W ±5%	
DJR-57-70	Resistor (Carbon)	6	4.7kΩ 1/4W ±5%	
DJR-57-71	Resistor (Carbon)	9	10kΩ 1/4W ±5%	
DJR-57-72	Resistor (Carbon)	7	100kΩ 1/4W ±5%	
DJR-57-73	Resistor (Carbon)	15	1kΩ 1/4W ±5%	
DJR-57-74	Resistor (Carbon)	2	5.6kΩ 1/4W ±5%	

No.	Name of Parts	Q'ty	Remarks	FOB Japan per pc.
DJR-57-75	Resistor (Carbon)	1	120Ω 1/4W ± 5%	
DJR-57-76	Resistor (Carbon)	1	150Ω 1/4W ± 5%	
DJR-57-77	Resistor (Carbon)	2	20KΩ 1/4W ± 5%	
DJR-57-78	Resistor (Carbon)	1	150KΩ 1/4W ± 5%	
DJR-57-79	Resistor (Carbon)	1	30KΩ 1/4W ± 5%	
DJR-57-80	Resistor (Carbon)	1	43KΩ 1/4W ± 5%	
DJR-57-81	Resistor (Carbon)	1	13KΩ 1/4W ± 5%	
DJR-57-83	Resistor (Carbon)	5	68Ω 1/4W ± 5%	
DJR-57-84	Resistor (Carbon)	7	330Ω 1/4W ± 5%	
DJR-57-85	Resistor (Carbon)	2	33kΩ 1/4W ± 5%	
DJR-57-86	Resistor (Carbon)	4	220Ω 1/4W ± 5%	
DJR-57-87	Resistor (Carbon)	5	470Ω 1/4W ± 5%	
DJR-57-88	Resistor (Carbon)	1	680Ω 1/4W ± 5%	
DJR-57-89	Resistor (Carbon)	4	100Ω 1/4W ± 5%	
DJR-57-90	Resistor (Carbon)	1	200Ω 1/4W ± 5%	
DJR-57-91	Crystal Oscillator	1	HC-18U-182 (6.000MHz)	


4. Power P.C.Board



No.	Name of Parts	Q'ty	Remarks	FOB Japan per pc.
DJR-18-01	(PP-7B) Power P.C.Board	1	Complete Set	
DJR-18-02	Transistor	1	2SC2555	
DJR-18-03	Transistor	2	2SA817	
DJR-18-04	Transistor	1	2SC2535	
DJR-18-05	Transistor	1	2SA1015	
DJR-18-06	Fast Recovery Center Tap Diode	1	CTU-2S	
DJR-18-07	Shot Key Diode	2	CTB33S	
DJR-18-08	Silicon Rectifier Diode	1	S4VB40 4A 400VW	
DJR-18-09	Silicon Rectifier Diode	1	1B4B41	
DJR-18-10	Hybrid IC	2	3D-1001	
DJR-18-11	3 Terminals Regulators	1	7824	
DJR-18-12	3 Terminals Regulators	1	7812	
DJR-18-13	Thyristors	1	5P4M	
DJR-18-14	Thyristors	1	03P05M	
DJR-18-15	Diode	4	1S954	
DJR-18-16	Diode	4	10DF-4	
DJR-18-17	Photo Coupler	1	PC614	
DJR-18-18	Zener Diode	1	05Z5.6U	
DJR-18-19	Zener Diode	1	05Z5.1L	
DJR-18-20	Zener Diode	1	05Z5.6Z	
DJR-18-21	Ceramic Capacitor	3	DE0707B471K2K 470pF2KV	
DJR-18-22	Ceramic Capacitor	1	0.1MF 50V	
DJR-18-23	Film Capacitor	3	MDD2J473M 0.047MF 630VW	
DJR-18-24	Film Capacitor	2	0.01MF 50V	
DJR-18-25	Film Capacitor	2	1000pF 50V	
DJR-18-26	Aluminum Electrolytic Capacitor	1	1000MF 50V	
DJR-18-27	Aluminum Electrolytic Capacitor	2	47MF 35V	
DJR-18-28	Aluminum Electrolytic Capacitor	7	47MF 16V	
DJR-18-29	Aluminum Electrolytic Capacitor	4	3300MF 10V	
DJR-18-30	Aluminum Electrolytic Capacitor	2	100MF 25V	
DJR-18-31	Aluminum Electrolytic Capacitor	5	10MF 16V	
DJR-18-32	Aluminum Electrolytic Capacitor	2	330MF 200V	
DJR-18-33	Aluminum Electrolytic Capacitor	1	1000MF 25V	
DJR-18-34	Resistor (Coil Winding)	1	20 OHM 2W	
DJR-18-35	Resistor (Carbon)	5	1K OHM $\frac{1}{4}$ W $\pm$ 5%	
DJR-18-36	Resistor (Carbon)	8	51 OHM $\frac{1}{4}$ W $\pm$ 5%	
DJR-18-37	Resistor (Carbon)	6	12 OHM $\frac{1}{2}$ W $\pm$ 5%	
DJR-18-38	Resistor (Carbon)	1	470 OHM $\frac{1}{4}$ W $\pm$ 5%	
DJR-18-39	Resistor (Carbon)	1	22 OHM $\frac{1}{2}$ W $\pm$ 5%	
DJR-18-40	Resistor (Carbon)	2	20K OHM $\frac{1}{2}$ W $\pm$ 5%	

No.	Name of Parts	Q'ty	Remarks	FOB Japan per pc.
DJR-18-41	Resistor (Carbon)	1	100 OHM ½W	
DJR-18-42	Resistor (Cement)	1	20 OHM 5W	
DJR-18-43	Resistor (Metal Oxide)	1	510 OHM 3W	
DJR-18-44	Variable Resistor	2	50K OHM GF06P	
DJR-18-45	Variable Resistor	2	2K OHM GF06P	
DJR-18-46	Shunt Resistor	2	5m OHM	
DJR-18-47	SC Coil	1	SC-02	
DJR-18-48	SF Coil	2	100MH 5A	
DJR-18-49	SF Coil	2	800MH 2A	
DJR-18-50	Oscillator Transformer	1	EC-35 Type 3D-0097	
DJR-18-51	Oscillator Transformer	1	EI-30 Type 3D-0097	
DJR-18-52	Oscillator Transformer	2	EE-16 Type 3D-1000	
DJR-18-53	Fuse Element	1	FGMB 4A 125V NR Type	

**PRINTED IN JAPAN**

**©1982 Nintendo of America Inc.**

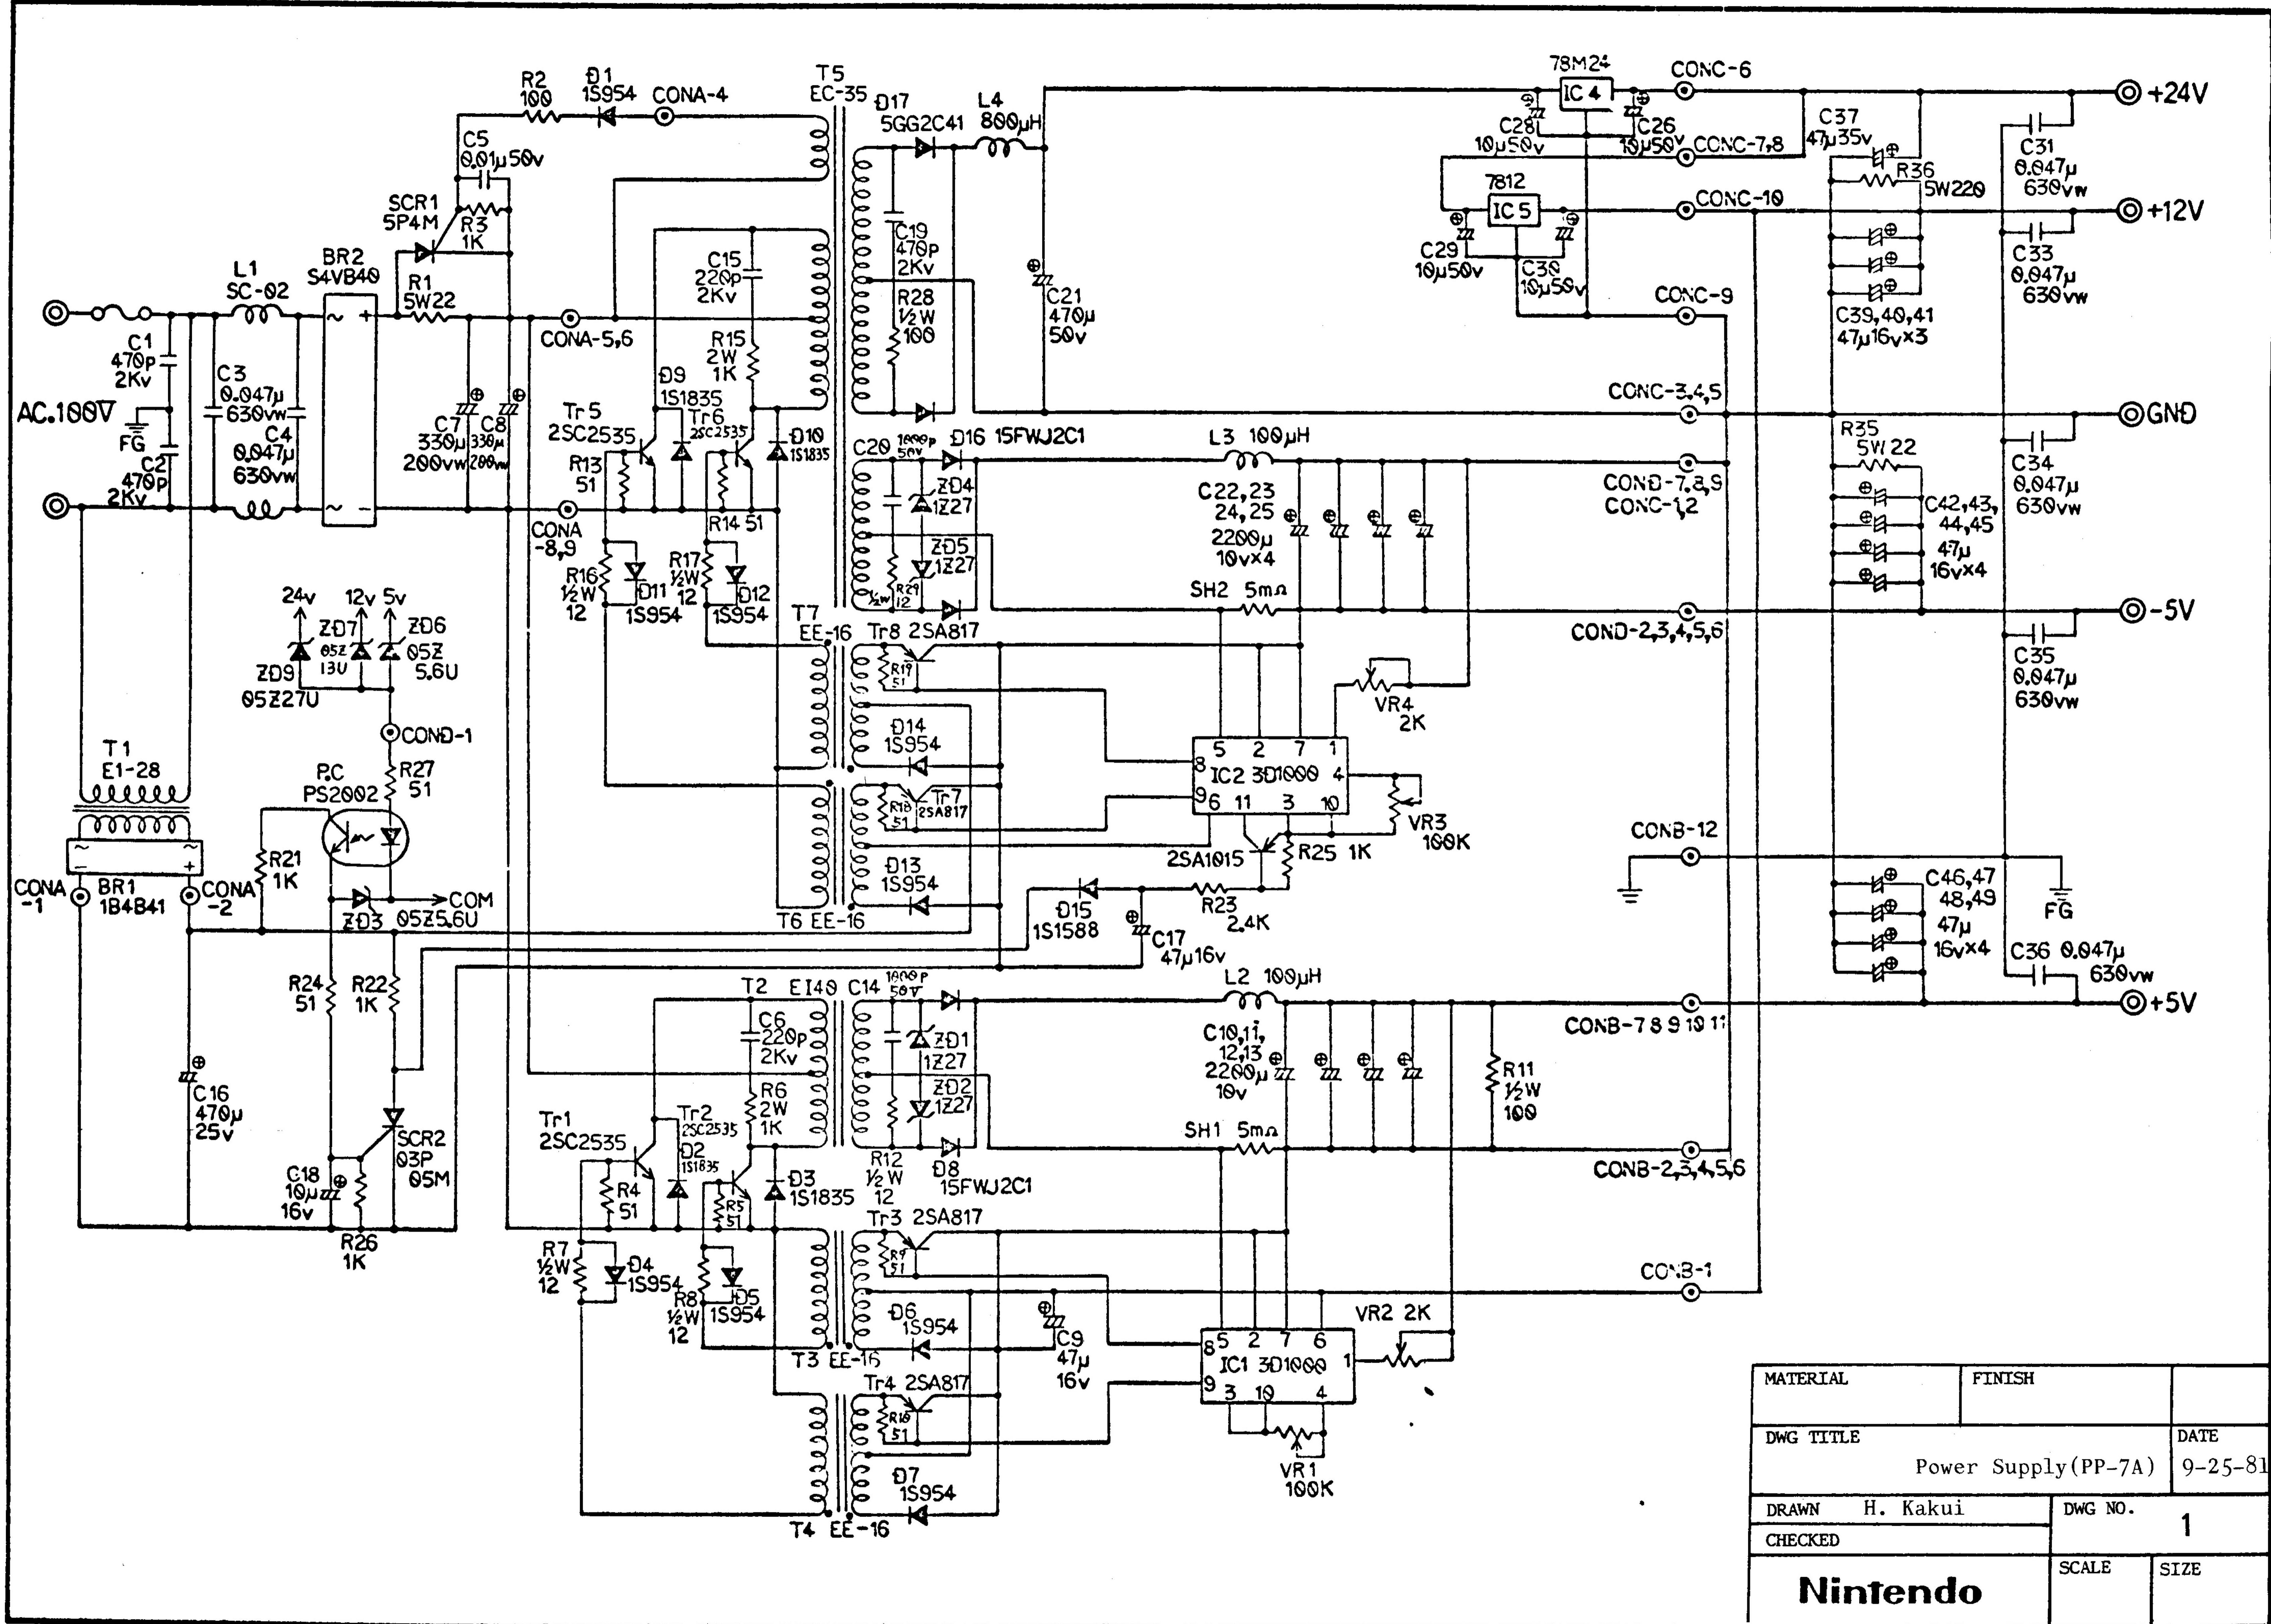

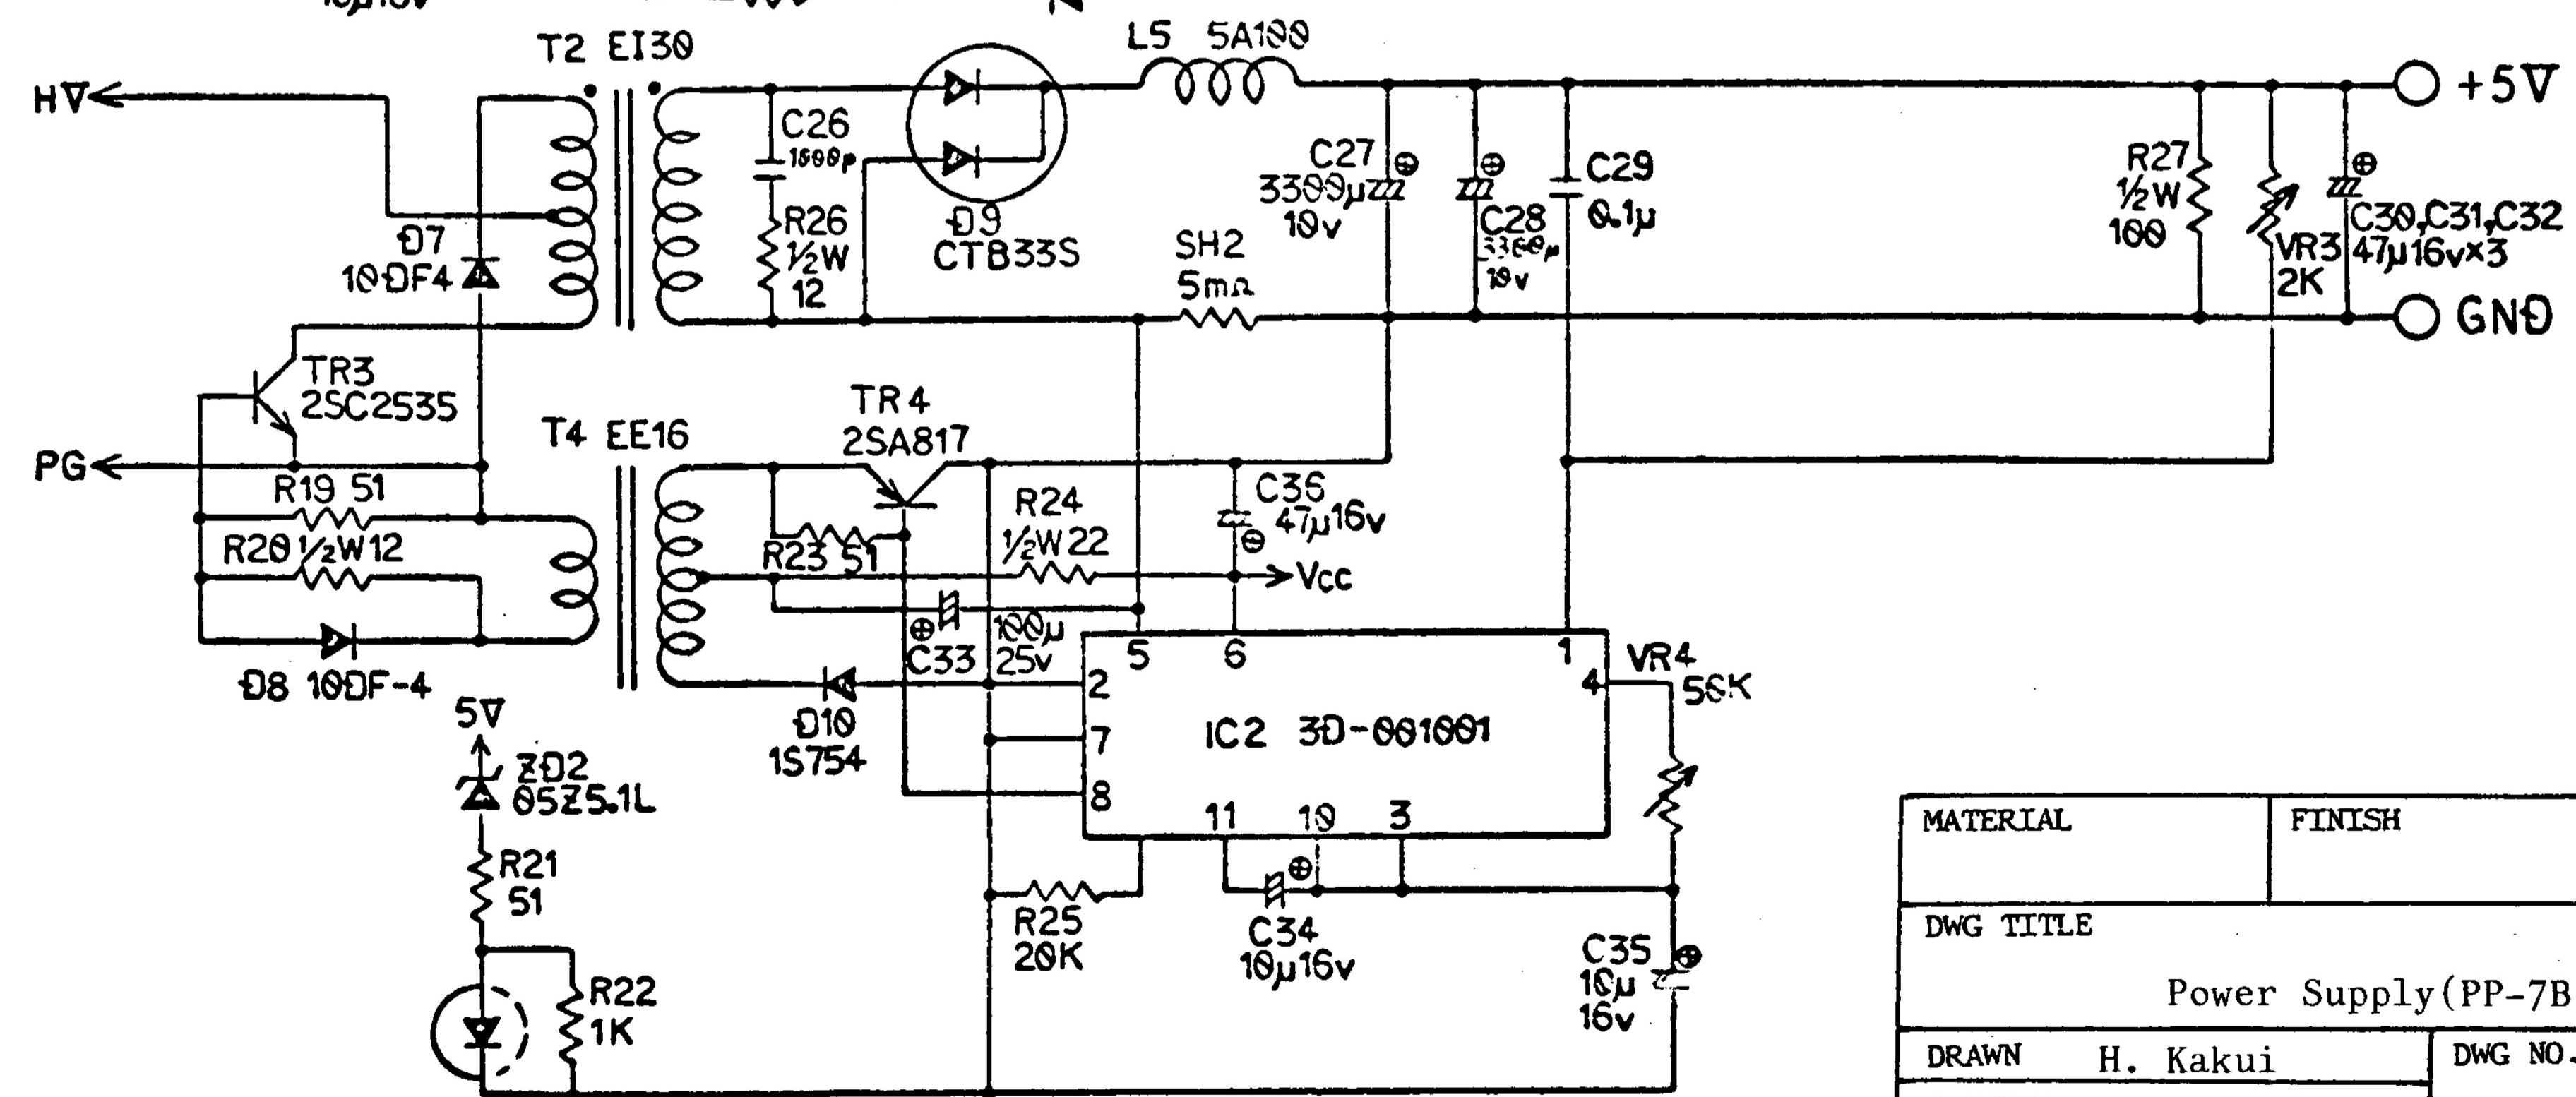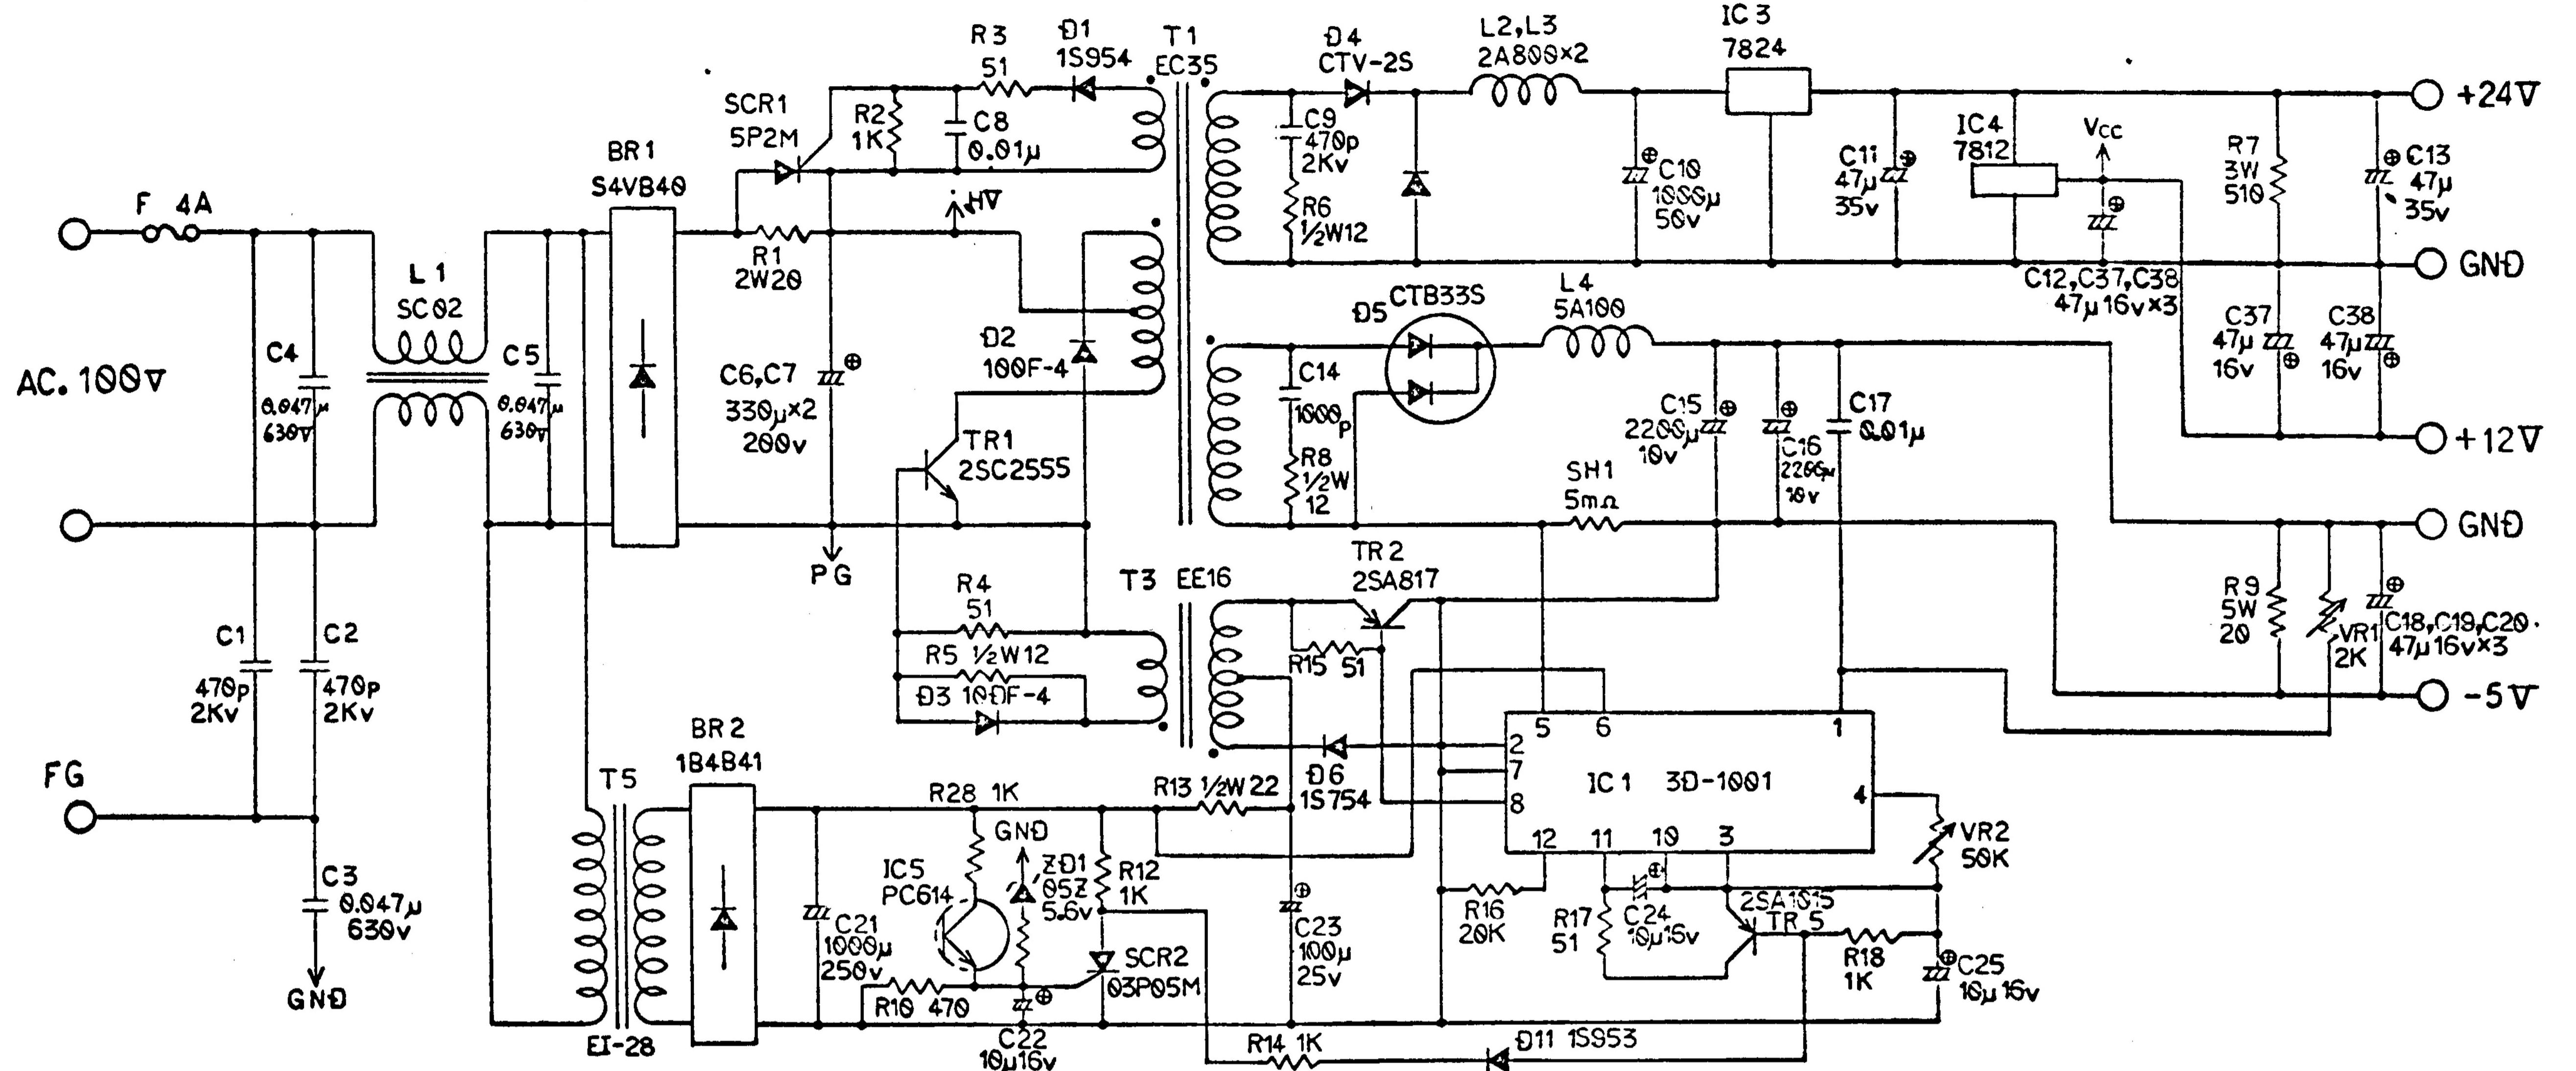

MATERIAL	FINISH	
DWG TITLE		DATE
Power Supply (PP-7B)		9-25-81
DRAWN	H. Kakui	DWG NO.
CHECKED		2
Nintendo	SCALE	SIZE

# 20-EZV (R-B)

## NOTE

- Every resistors without value descriptions are 1/4W
- Bearable voltage of capacitors are 50V
- Diodes without descriptions of variation are 1S1555 or 1S2706 or 1S2473 or DS442

## Resistors

Ex. : 2 F P J Rank of Accuracy(\*List 1)  
 Figure  
 Variations(\*List 2)  
 Value(W)

## List 1.

Mark	F	G	J	K
Rank	$\pm 1\%$	$\pm 2\%$	$\pm 5\%$	$\pm 10\%$

## List 2.

Mark	F	N	R	C	Y
Variation	Carbon	Metal	Metal Oxide	Solid	Coil Winding

## List 3.


Mark	C	EE	F	N
Variation	Ceramic	Electrolytic	Polyester	Polypropylene

## Capacitor

Ex. : 160 EE M- Rank of Accuracy  
 Variation(I)  
 Bearable Voltage


## List 4.

Mark	J	K	M	N
Rank	$\pm 5\%$	$\pm 10\%$	$\pm 20\%$	$\pm 30\%$

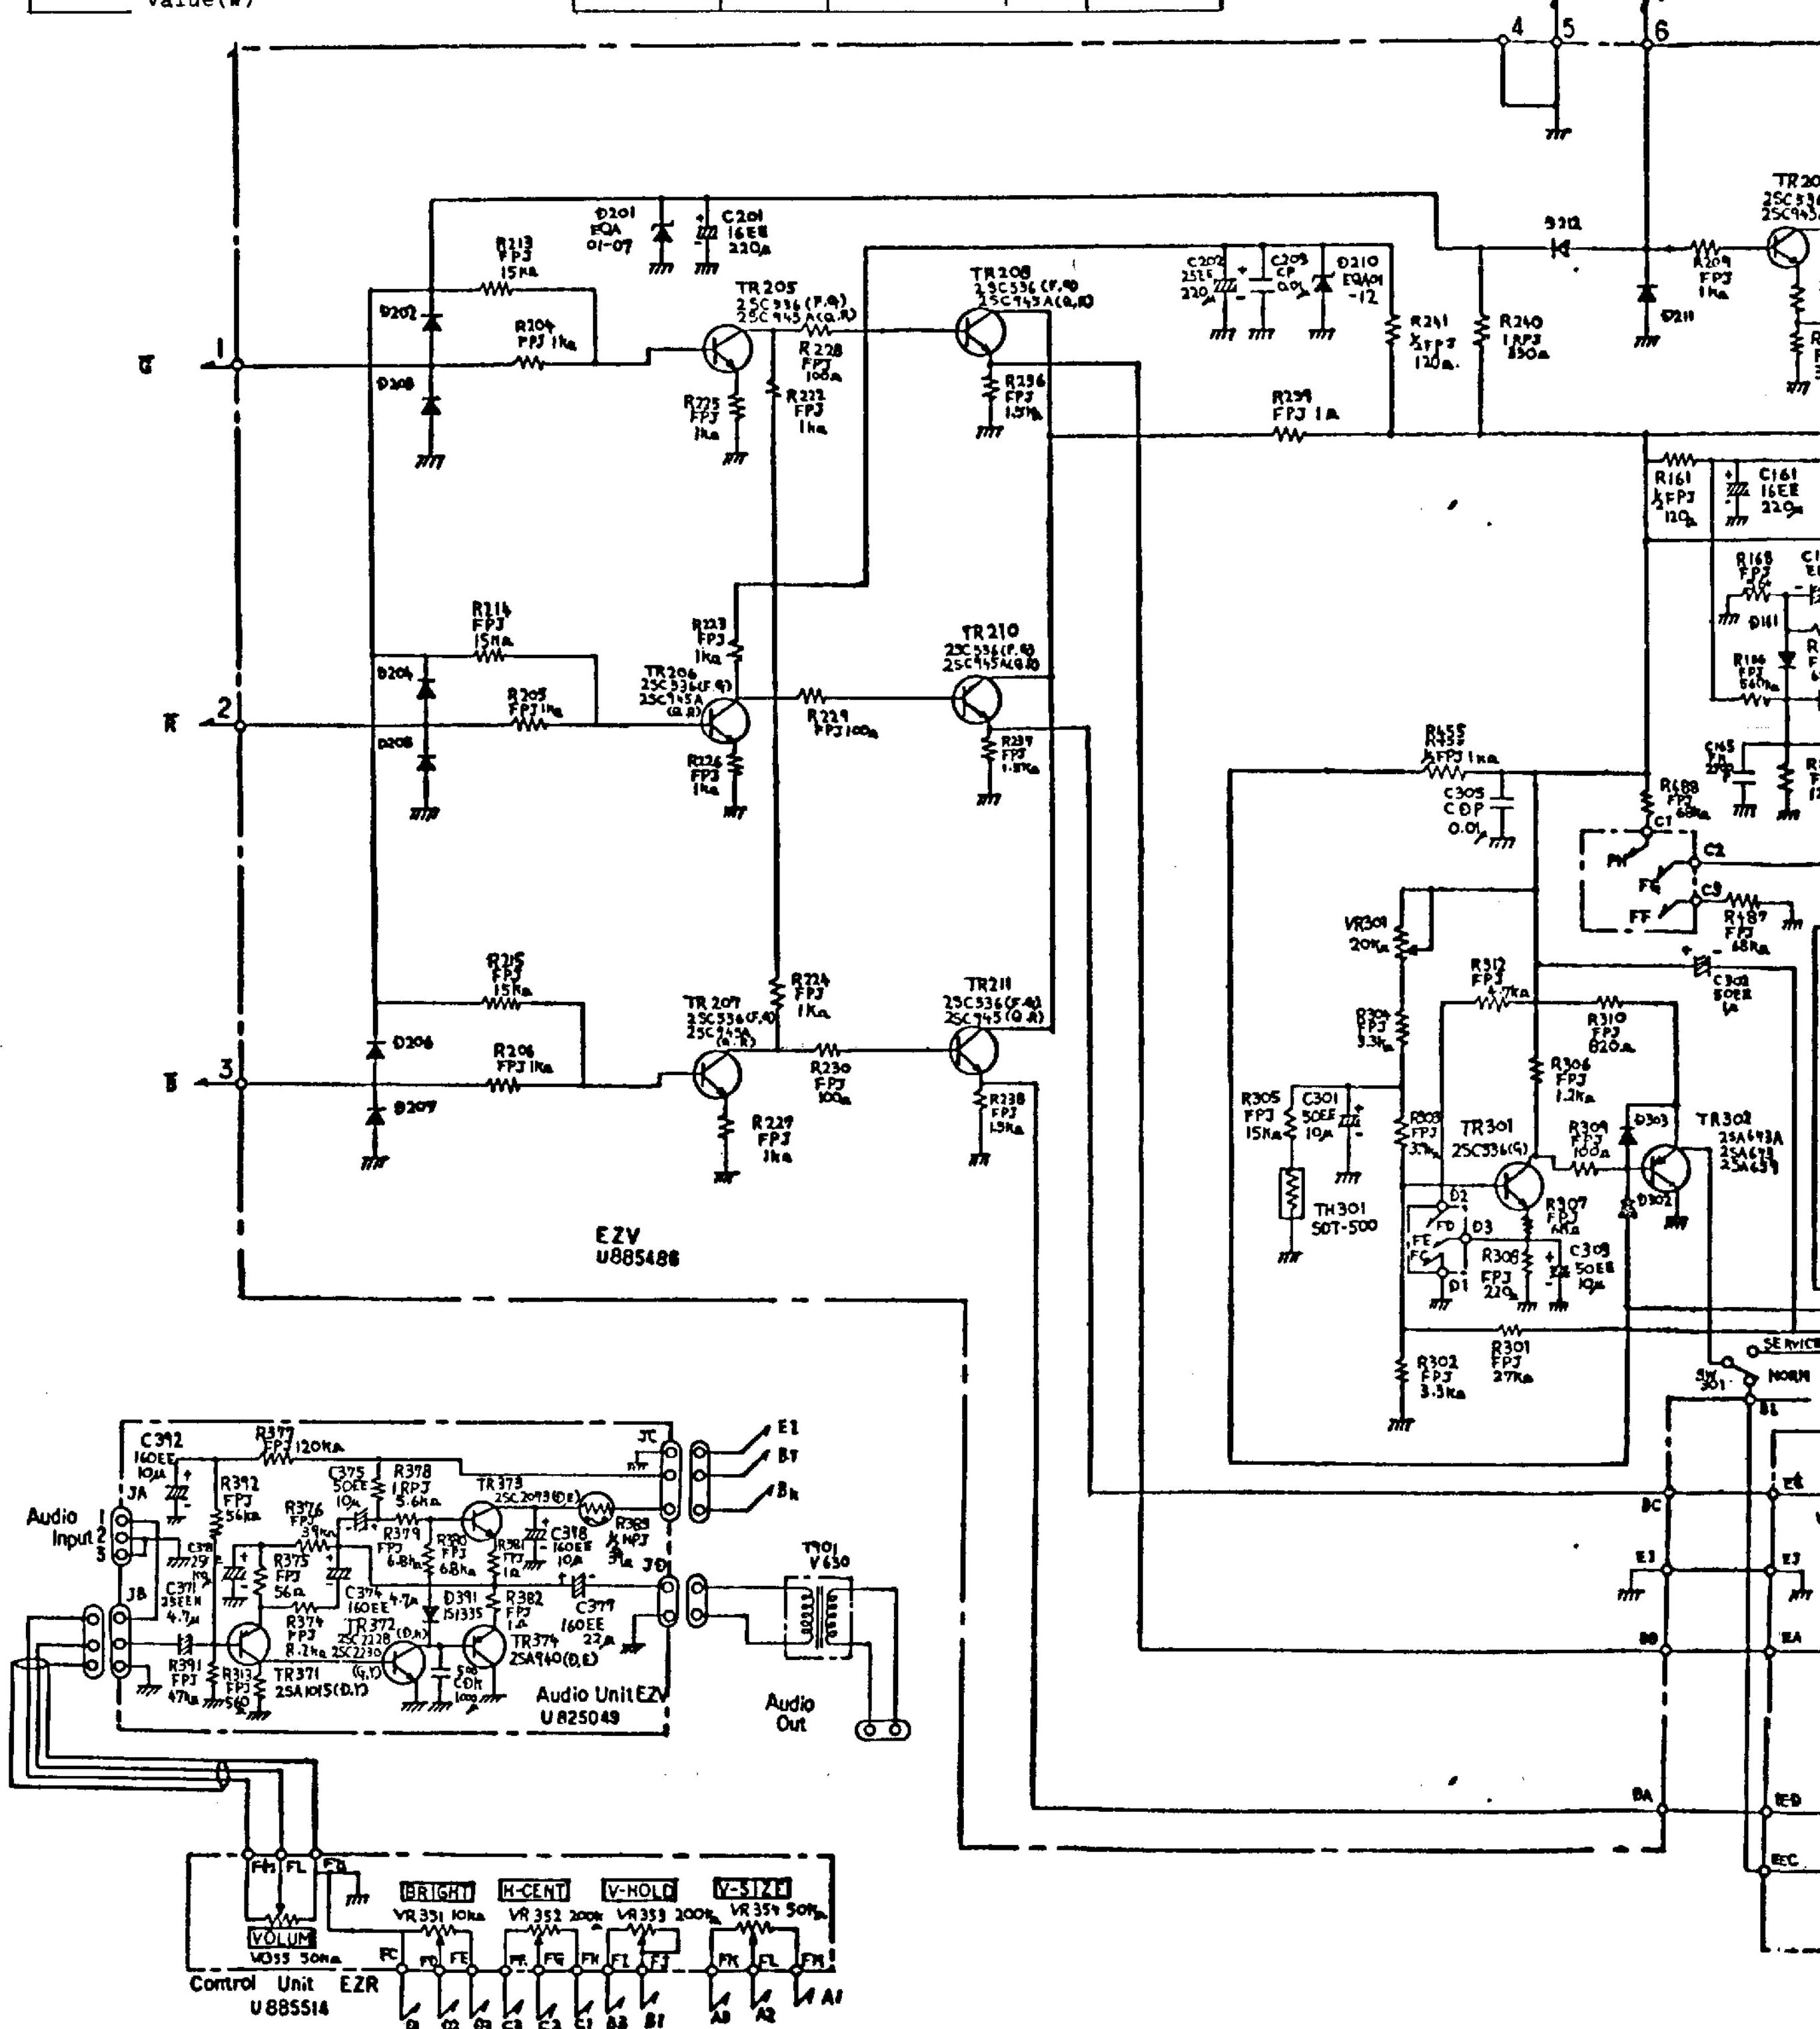



Rank of Accuracy (List 4)  
 Variation(List 3)  
 Bearable Voltage

M	N
+20%	+30%

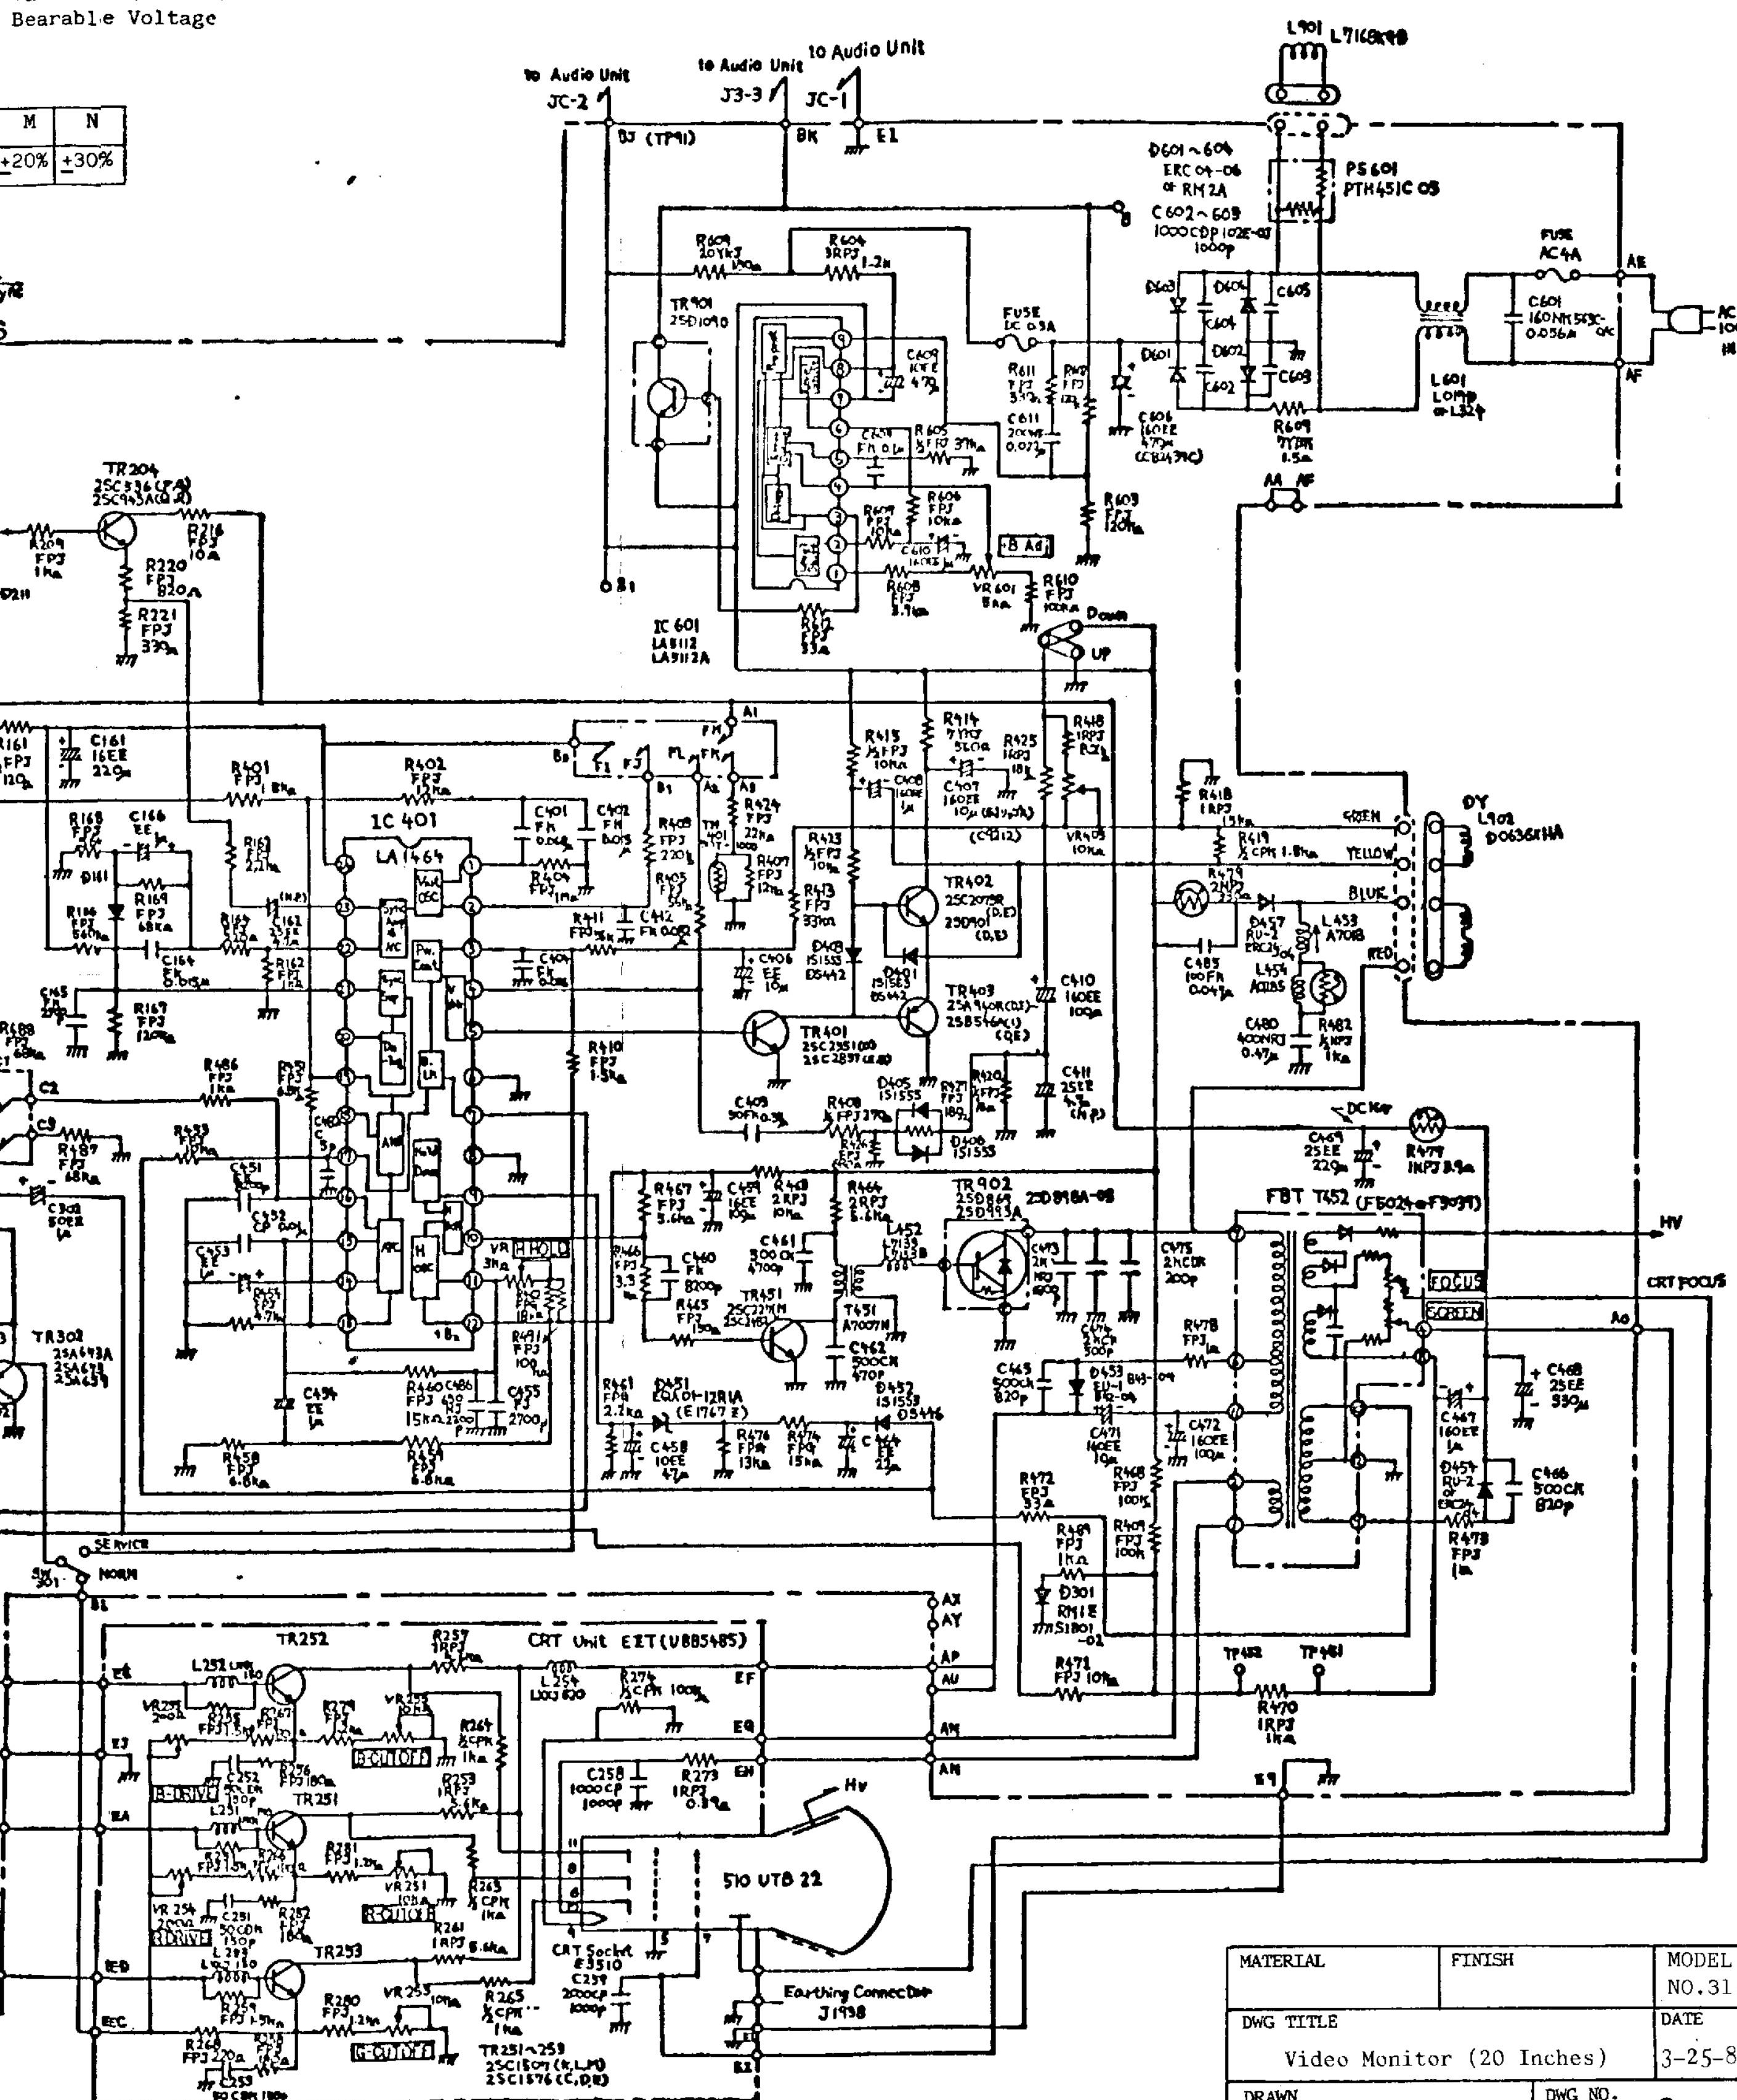


Nintendo

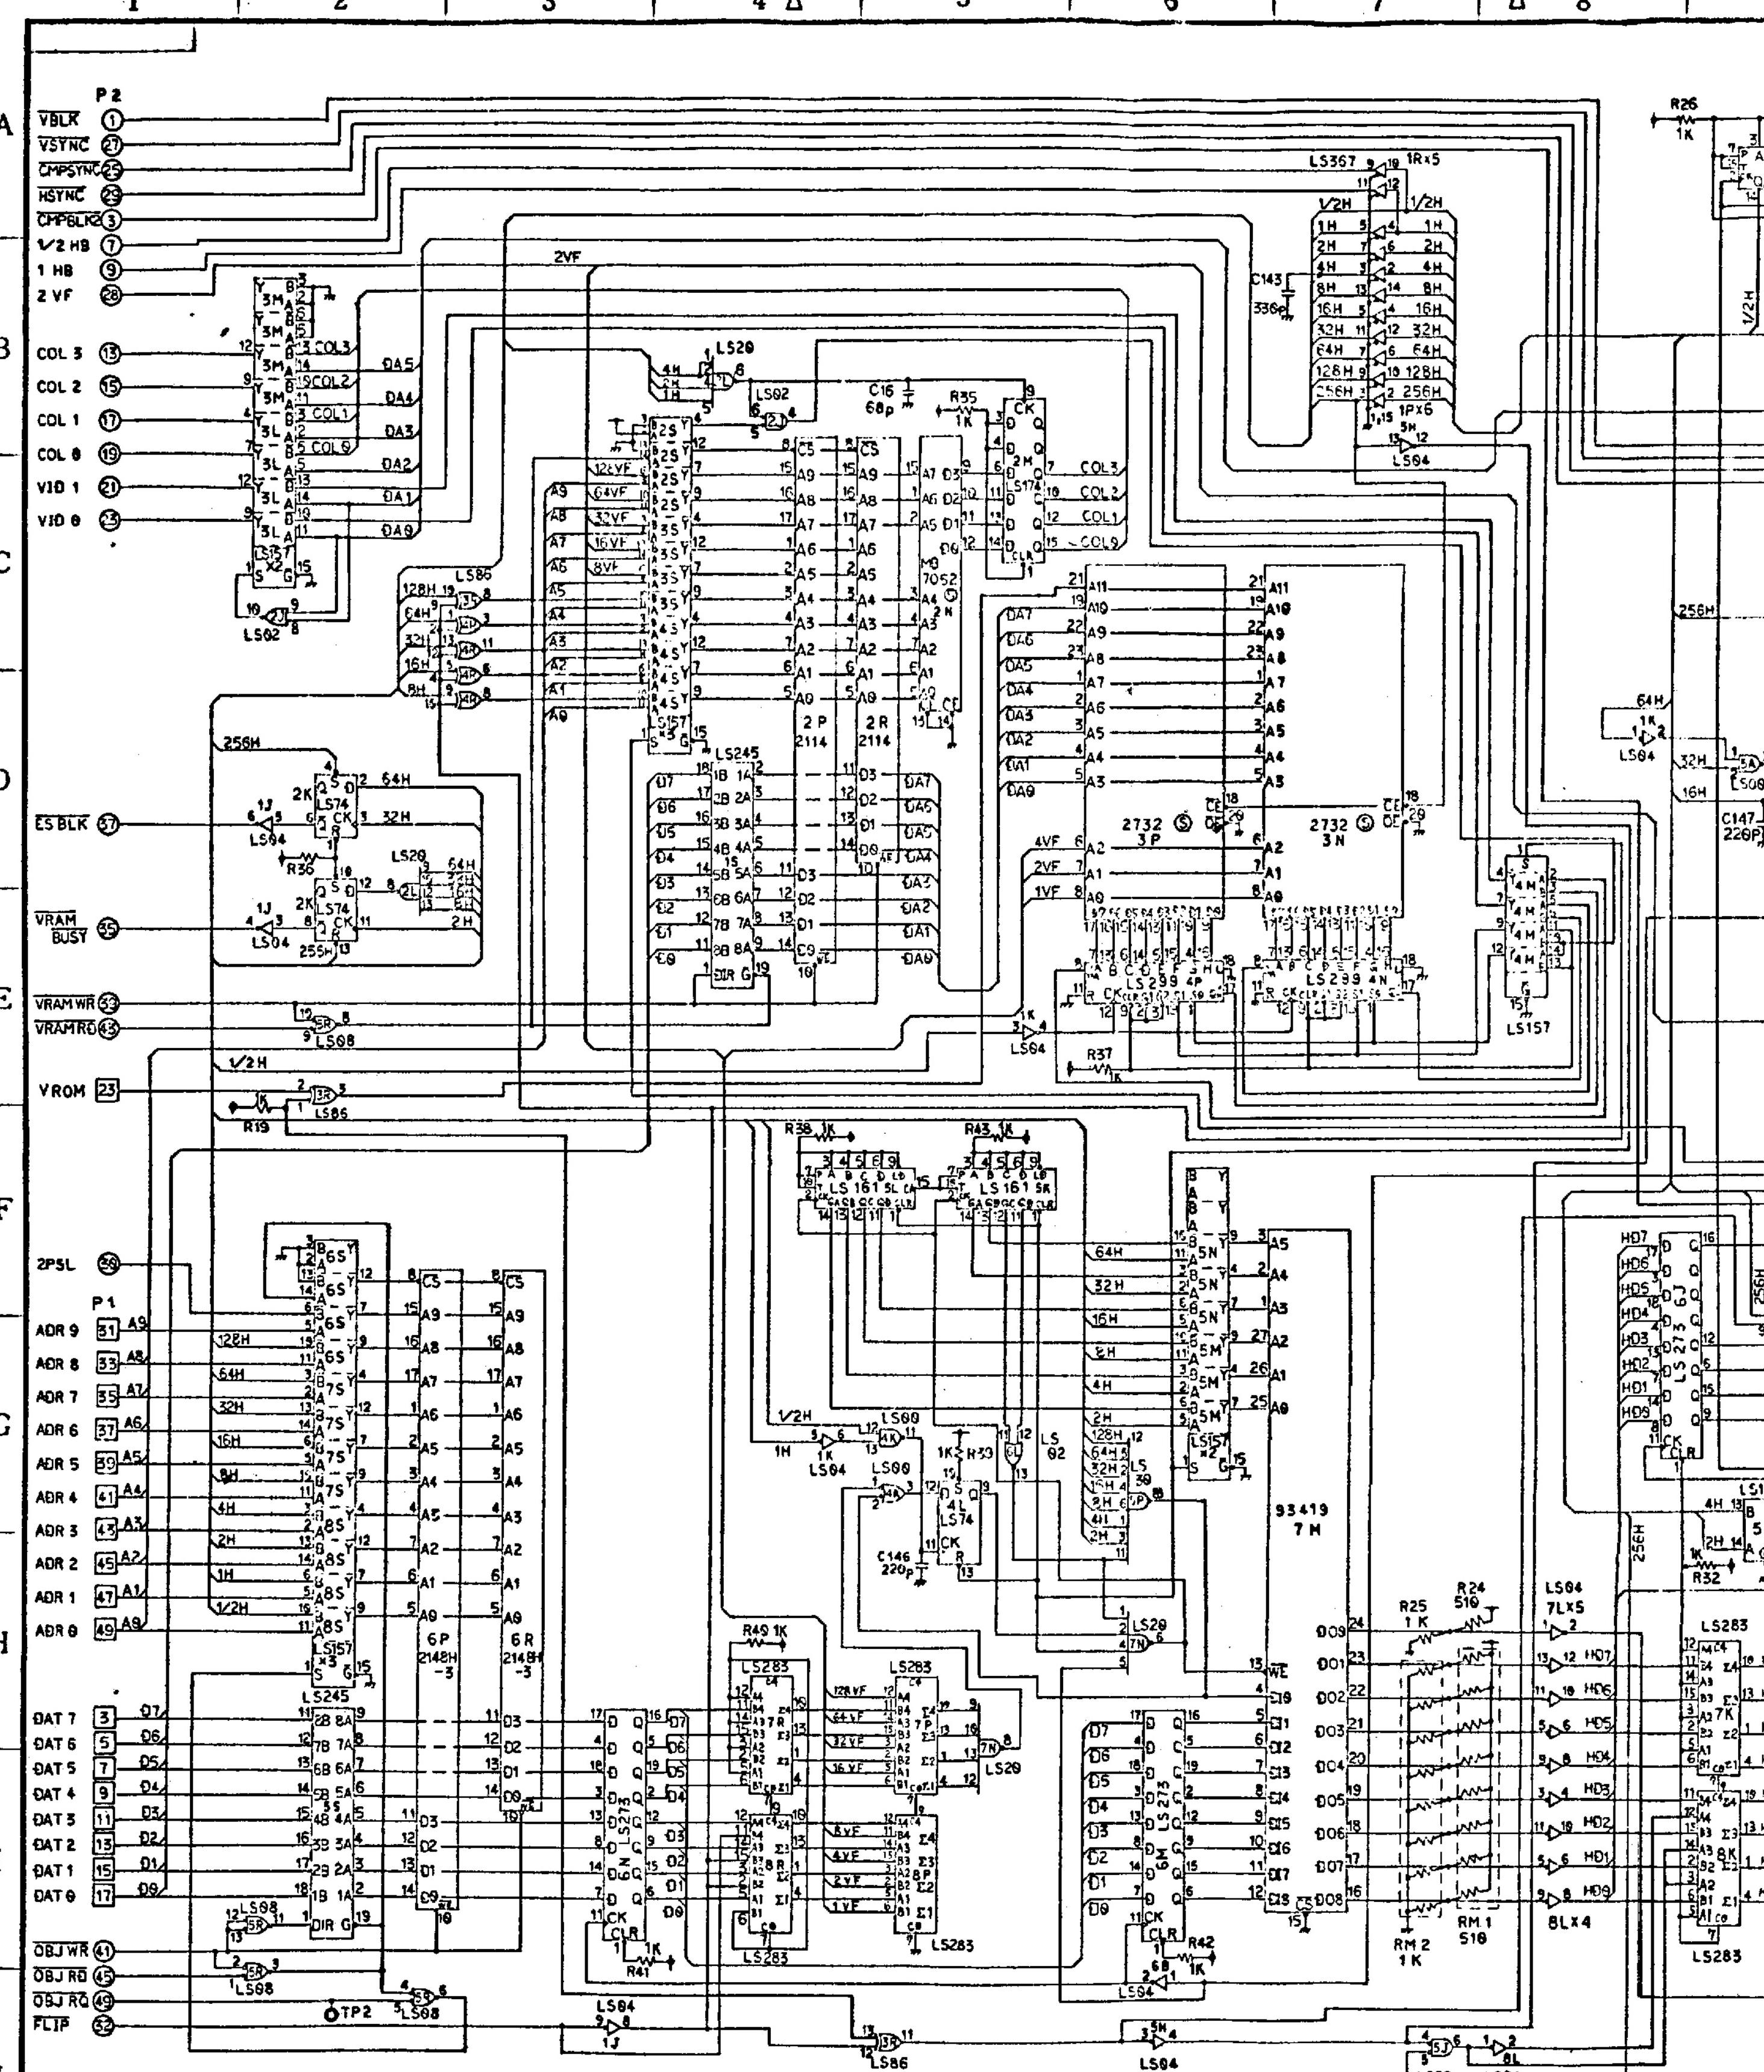

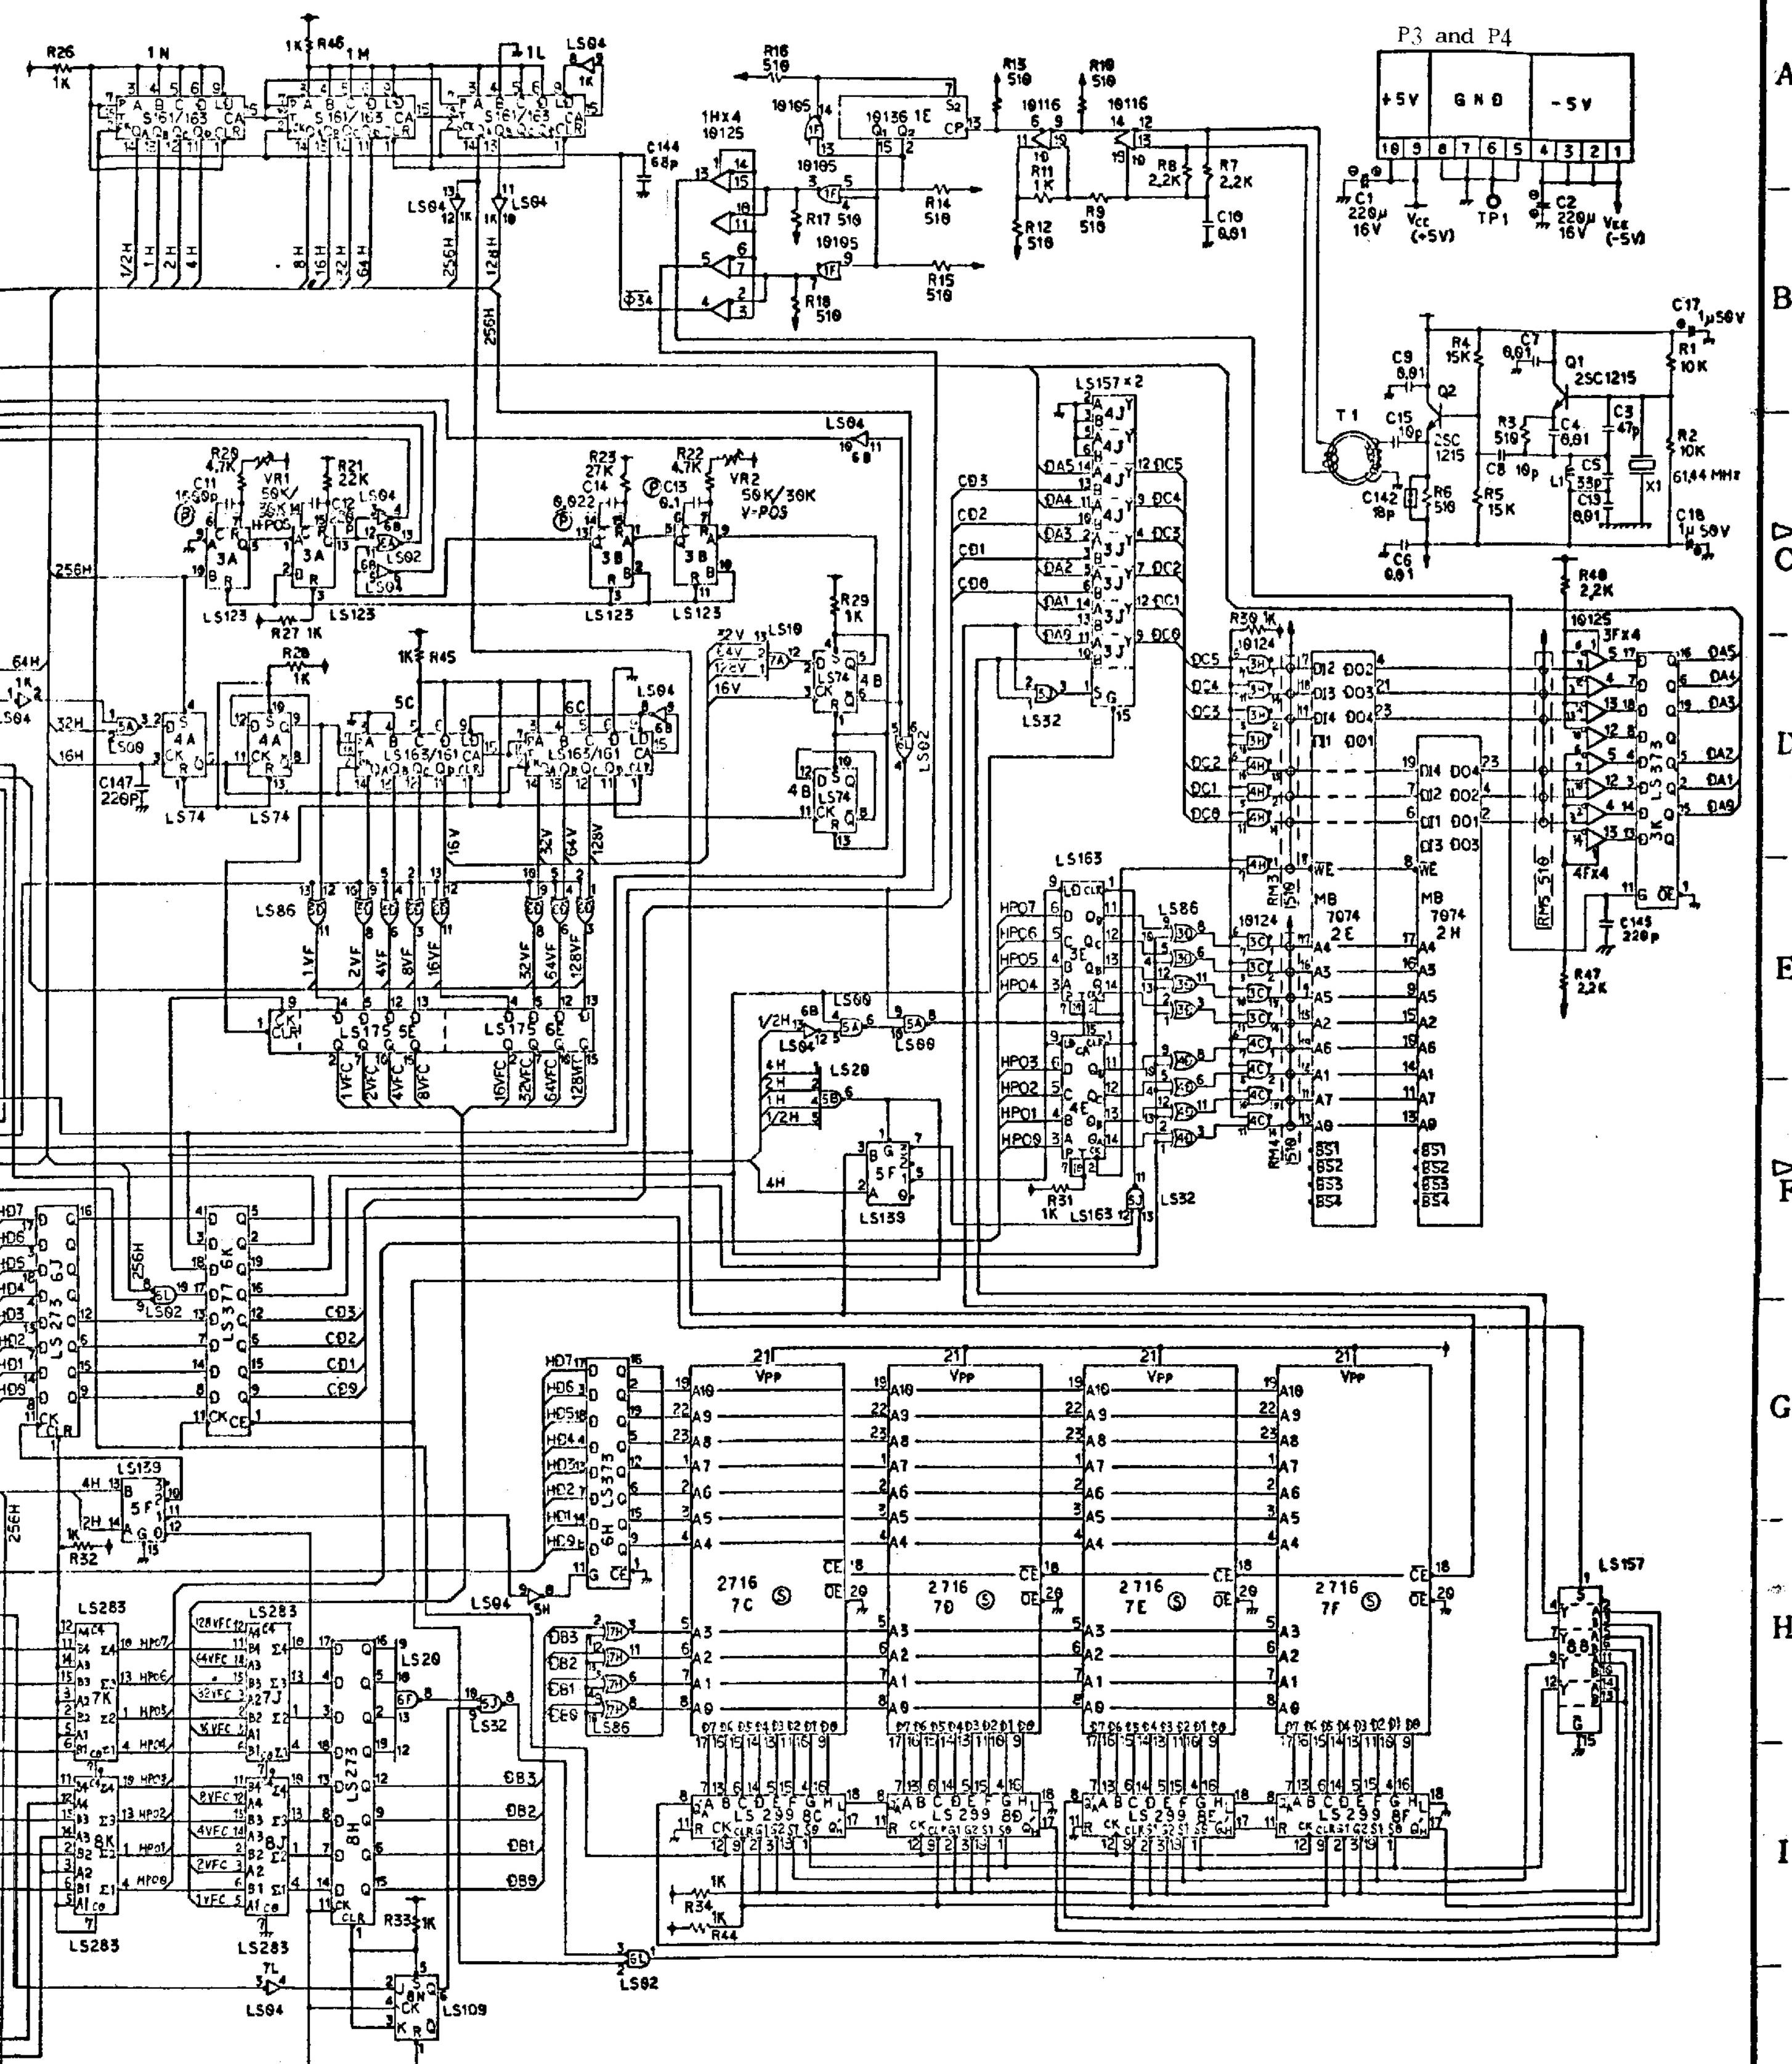

MATERIAL	FINISH	
DWG TITLE	Donkey Kong Junior Video P.C. Board	DATE 5-19-82
DRAWN	O. Komori	DWG NO. 4
CHECKED		
Nintendo	SCALE	SIZE

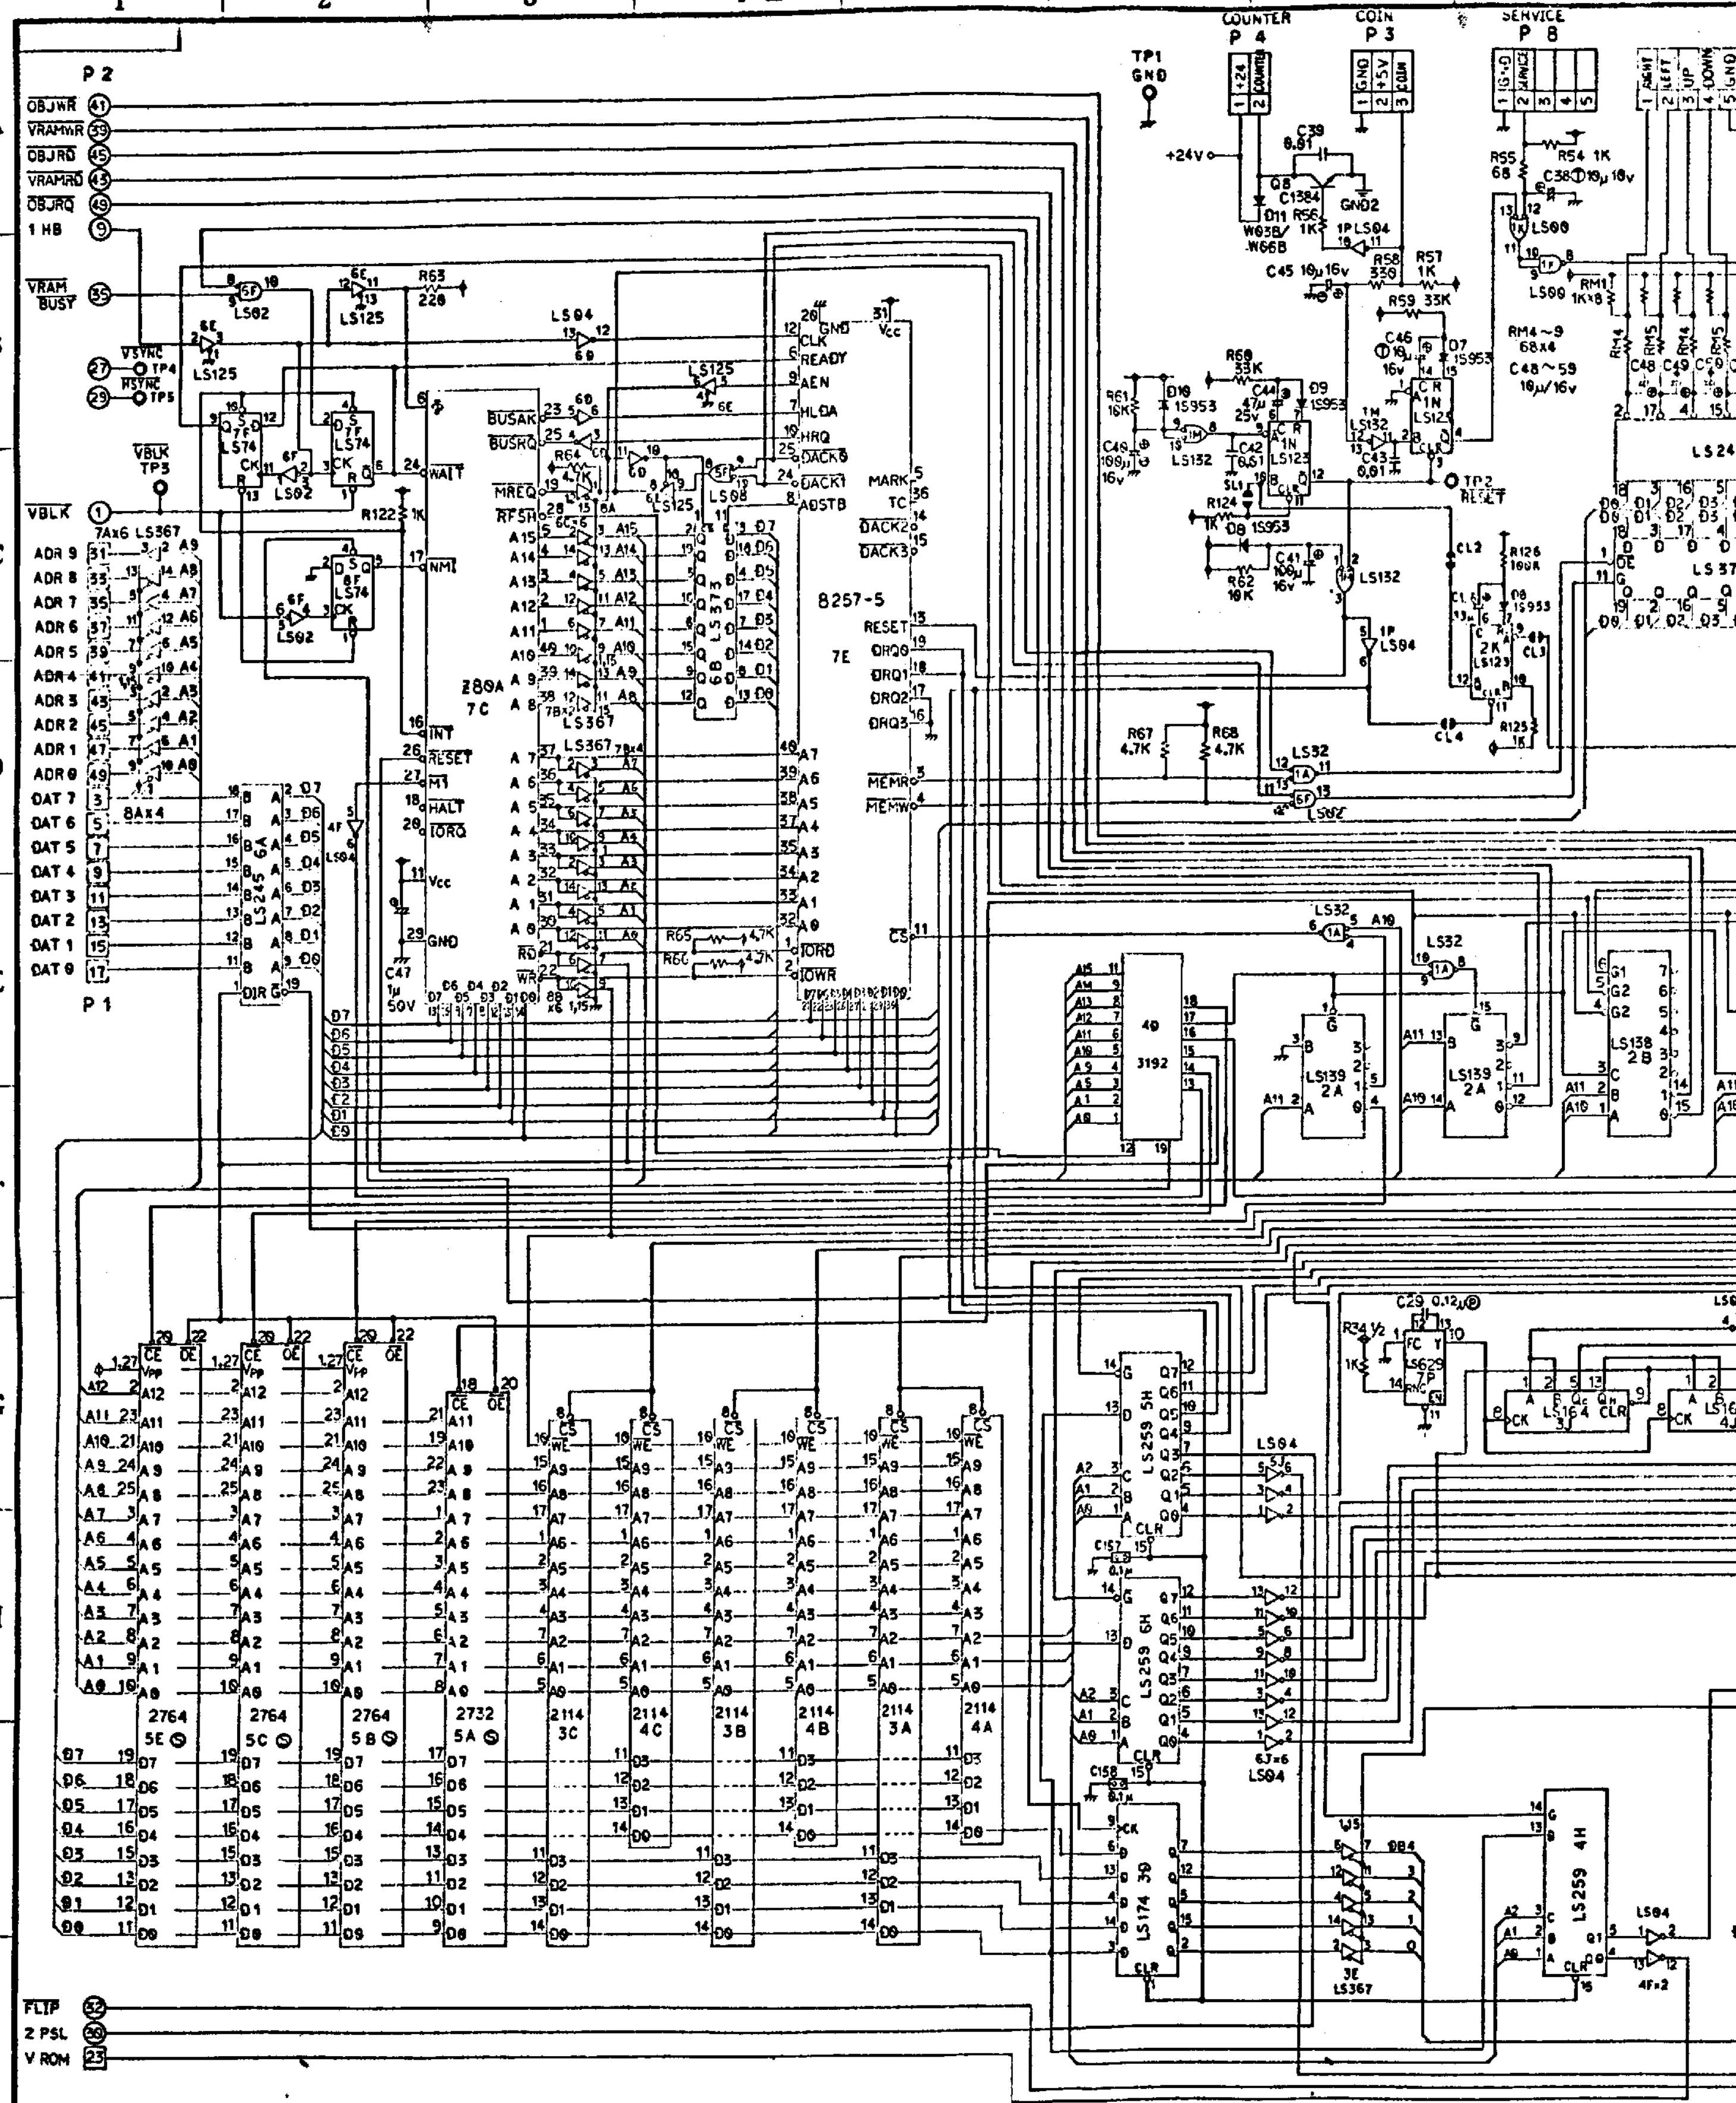

NOTE 1: EDGE CONNECTOR PIN ARRANGEMENT

PARTS-SIDE	1 GND	2 GND	3 +5V	4 -5V	5 +12V	6 -12V	7 PLAY	8 2P RIGHT	9 2P LEFT	10 2P UP	11 2P DOWN	12 2P JUMP	13 2P	14 GND	15 VIDEO GND	16 GREEN	17 GREEN	18 SYNC	19 SPEAKER	20 +24V	21 GND	22 GND
------------	-------	-------	-------	-------	--------	--------	--------	------------	-----------	----------	------------	------------	-------	--------	--------------	----------	----------	---------	------------	---------	--------	--------

SOLDERED-SIDE	A GND	B GND	C +5V	D +5V	E +12V	F -5V	G -5V	H GND	I PLAY	J 1 PLAY	K 1 RIGHT	L 1 LEFT	M 1 UP	N 1 DOWN	O 1 JUMP	P 1 JUMP	R I	S SERVICE	T GND	U REQ	V BLU	W T.V. Audio	X COUNTER	Y GND	Z GND
---------------	-------	-------	-------	-------	--------	-------	-------	-------	--------	----------	-----------	----------	--------	----------	----------	----------	-----	-----------	-------	-------	-------	--------------	-----------	-------	-------

1P: Main Side  
2P: Sub Side  
1 PLAY: 1 PLAYER SW.  
2 PLAY: 2 PLAYER SW.

P12 PIN ARRANGE

-5V	GND	+5V
1	2	3
4	5	6
7	8	9
10	11	12
13	14	15
16	17	18
19	20	21
22	23	24
25	26	27
28	29	30
31	32	33
34	35	36
37	38	39
40	41	42
43	44	45
46	47	48
49	50	51
52	53	54
55	56	57
58	59	60
61	62	63
64	65	66
67	68	69
70	71	72
73	74	75
76	77	78
79	80	81
82	83	84
85	86	87
88	89	90
91	92	93
94	95	96
97	98	99
90	91	92
93	94	95
96	97	98
99	100	101
102	103	104
105	106	107
108	109	110
111	112	113
114	115	116
117	118	119
120	121	122
123	124	125
126	127	128
129	130	131
132	133	134
135	136	137
138	139	140
141	142	143
144	145	146
147	148	149
150	151	152
153	154	155
156	157	158
159	160	161
162	163	164
165	166	167
168	169	170
171	172	173
174	175	176
177	178	179
180	181	182
183	184	185
186	187	188
189	190	191
192	193	194
195	196	197
198	199	200
201	202	203
204	205	206
207	208	209
210	211	212
213	214	215
216	217	218
219	220	221
222	223	224
225	226	227
228	229	230
231	232	233
234	235	236
237	238	239
240	241	242
243	244	245
246	247	248
249	250	251
252	253	254
255	256	257
258	259	260
261	262	263
264	265	266
267	268	269
270	271	272
273	274	275
276	277	278
279	280	281
282	283	284
285	286	287
288	289	290
291	292	293
294	295	296
297	298	299
290	291	292
293	294	295
296	297	298
299	300	301
302	303	304
305	306	307
308	309	310
311	312	313
314	315	316
317	318	319
320	321	322
323	324	325
326	327	328
329	330	331
332	333	334
335	336	337
338	339	340
341	342	343
344	345	346
347	348	349
350	351	352
353	354	355
356	357	358
359	360	361
362	363	364
365	366	367
368	369	370
371	372	373
374	375	376
377	378	379
380	381	382
383	384	385
386	387	388
389	390	391
392	393	394
395	396	397
398	399	400
401	402	403
404	405	406
407	408	409
410	411	412
413	414	415
416	417	418
419	420	421
422	423	424
425	426	427
428	429	430
431	432	433
434	435	436
437	438	439
440	441	442
443	444	445
446	447	448
449	450	451
452	453	454
455	456	457
458	459	460
461	462	463
464	465	466
467	468	469
470	471	472
473	474	475
476	477	478
479	480	481
482	483	484
485	486	487
488	489	490
491	492	493
494	495	496
497	498	499
490	491	492
493	494	495
496	497	498
499	500	501
502	503	504
505	506	507
508	509	510
511	512	513
514	515	516
517	518	519
520	521	522
523	524	525
526	527	528
529	530	531
532	533	534
535	536	537
538	539	540
541	542	543
544	545	546
547	548	549
550	551	552
553	554	555
556	557	558
559	560	561
562	563	564
565	566	567
568	569	570
571	572	573
574	575	576
577	578	579
580	581	582
583	584	585
586	587	588
589	590	591
592	593	594
595	596	597
598	599	600
601	602	603
604	605	606
607	608	609
610	611</td	

